



 
BHF

Universal Quick



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |    |     |
|---------------------------|----|-----|
| MODEL                     | ØD | M   |
| BHF 0408                  | 4  | M8  |
| BHF 0608                  | 6  | M8  |
| BHF 0612                  | 6  | M12 |
| BHF 0812                  | 8  | M12 |
| BHF 0814                  | 8  | M14 |
| BHF 1014                  | 10 | M14 |
| BHF 1214                  | 12 | M14 |
| BHF 1218                  | 12 | M18 |

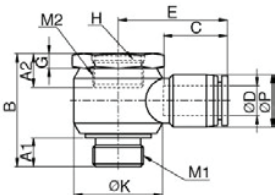


BMF

Bulkhead Reducer



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |    |     |
|---------------------------|----|-----|
| MODEL                     | ØD | M   |
| BMF 04M8                  | 4  | M8  |
| BMF 06M8                  | 6  | M8  |
| BMF 06M12                 | 6  | M12 |
| BMF 08M12                 | 8  | M12 |
| BMF 08M14                 | 8  | M14 |
| BMF 10M12                 | 10 | M12 |
| BMF 10M14                 | 10 | M14 |
| BMF 12M14                 | 12 | M14 |
| BMF 12M18                 | 12 | M18 |

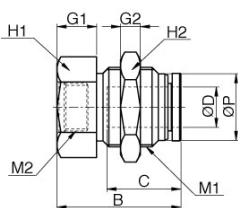 


BMR

Bush



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |      |
|---------------------------|-----|------|
| MODEL                     | M   | R    |
| BMR 0801                  | M8  | R1/8 |
| BMR 1201                  | M12 | R1/8 |
| BMR 1202                  | M12 | R1/4 |
| BMR 1203                  | M12 | R3/8 |
| BMR 1402                  | M14 | R1/4 |
| BMR 1403                  | M14 | R3/8 |
| BMR 1404                  | M14 | R1/2 |
| BMR 1803                  | M18 | R3/8 |
| BMR 1804                  | M18 | R1/2 |

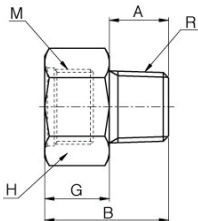 


BHMR

Universal Rc Thread



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |      |
|---------------------------|-----|------|
| MODEL                     | M   | R    |
| BHMR 08M5                 | M8  | M5   |
| BHMR 08M6                 | M8  | M6   |
| BHMR 0801                 | M8  | R1/8 |
| BHMR 12M6                 | M12 | M6   |
| BHMR 1201                 | M12 | R1/8 |
| BHMR 1401                 | M14 | R1/8 |
| BHMR 1402                 | M14 | R1/4 |
| BHMR 1802                 | M18 | R1/4 |

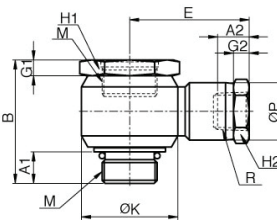 


BHWF

Universal Branch



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |    |     |
|---------------------------|----|-----|
| MODEL                     | ØD | M   |
| BHWF 1014                 | 10 | M14 |
| BHWF 1218                 | 12 | M18 |

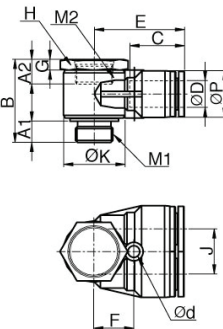 


BCM

Cap



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |
|---------------------------|-----|
| MODEL                     | M   |
| BCM 08                    | M8  |
| BCM 12                    | M12 |
| BCM 14                    | M14 |
| BCM 18                    | M18 |

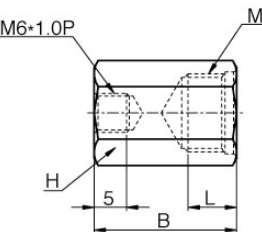 


BRM



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |      |
|---------------------------|-----|------|
| MODEL                     | M   | Rc   |
| BRM 08M5                  | M8  | M5   |
| BRM 12M6                  | M12 | M6   |
| BRM 1401                  | M14 | R1/8 |
| BRM 1802                  | M18 | R1/4 |

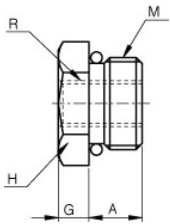 


BHM



MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |     |
|---------------------------|-----|-----|
| MODEL                     | M1  | M2  |
| BHM 1208                  | M12 | M8  |
| BHM 1212                  | M12 | M12 |
| BHM 1412                  | M14 | M12 |
| BHM 1414                  | M14 | M14 |
| BHM 1814                  | M18 | M14 |

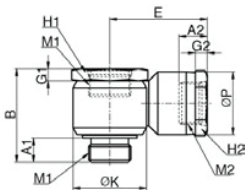 


BMM




MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |     |
|---------------------------|-----|-----|
| MODEL                     | M1  | M2  |
| BMM 1208                  | M12 | M8  |
| BMM 1412                  | M14 | M12 |
| BMM 1814                  | M18 | M14 |

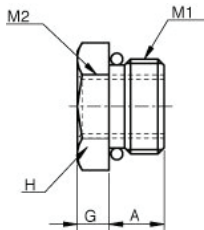 


BUMR

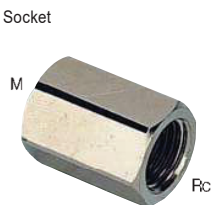 

MODEL[ØD-T]

| Tube (Metric) - Thread(R) |       |     |
|---------------------------|-------|-----|
| MODEL                     | Rc    | M   |
| BUMR 0801                 | Rc1/8 | M8  |
| BUMR 1202                 | Rc1/4 | M12 |
| BUMR 1403                 | Rc3/8 | M14 |
| BUMR 1804                 | Rc1/2 | M18 |

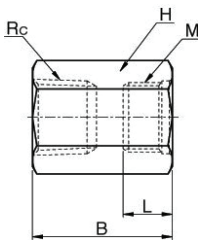 


BUMM




MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |
|---------------------------|-----|
| MODEL                     | M   |
| BUMM 0808                 | M8  |
| BUMM 1212                 | M12 |
| BUMM 1414                 | M14 |
| BUMM 1818                 | M18 |

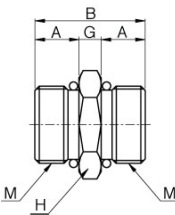 


BPM

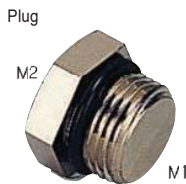 


MODEL[ØD-T]

| Tube (Metric) - Thread(R) |     |    |
|---------------------------|-----|----|
| MODEL                     | M1  | M2 |
| BPM 08                    | M8  | M6 |
| BPM 12                    | M12 | M6 |
| BPM 14                    | M14 | M6 |
| BPM 18                    | M18 | M6 |

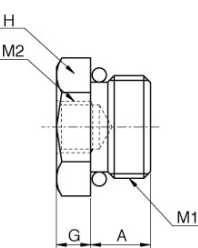 

BL

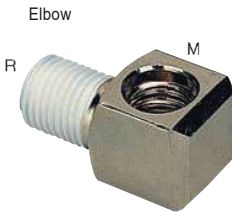 

MODEL[ØD-T]

| Tube (Metric) - Thread(R) |      |     |
|---------------------------|------|-----|
| MODEL                     | R    | M   |
| BL 0801                   | R1/8 | M8  |
| BL 1201                   | R1/8 | M12 |
| BL 1202                   | R1/4 | M12 |
| BL 1402                   | R1/4 | M14 |
| BL 1403                   | R3/8 | M14 |
| BL 1404                   | R1/2 | M14 |
| BL 1803                   | R3/8 | M18 |
| BL 1804                   | R1/2 | M18 |

