



Technical Information

MP1 Axial Piston Pumps

Size 28/32, 38/45





Revision history

Table of revisions

Date	Changed	Rev
February 2024	Corrected 15 teeth shaft spline class	0601
January 2024	Added MDC response time	0509
October 2023	Minor correction onto NFPE control	0508
October 2023	Туро	0507
October 2023	Minor correction onto some drawings in Controls section.	0506
July 2022	Added missing loop flushing valve sectional drawing and performance graph	0505
May 2022	Minor update onto 28/32 dimensions with speed sensor	0504
February 2022	Added option A3 endcap option to 38/45cc	0503
January 2022	Corrected the number of charge pressure in operating parameters	0502
December 2021	Added HDC control options	0501
April 2021	Corrected interface with ECU (EDC) graphic	0407
2017 - 2020	Various changes	0102 - 0406
August 2016	First Edition	0101

2 | © Danfoss | February 2024 BC178386485160en-000601



Contents		
General description		
	Overview	6
	Features	6
	System diagram	7
	Schematic	8
Technical specifications		
	Design specifications	9
	Technical data	9
	Operating parameters	10
	Fluid specifications	10
Operation		
	High Pressure Relief Valve (HPRV) and charge checkHPRV and charge check	11
	Bypass function	11
	Charge Pressure Relief Valve (CPRV)CPRV function	12
	Loop flushing valve	13
	Electrical displacement control (EDC)	14
	EDC principle	14
	EDC operation	14
	Control signal requirements, EDC MP1	15
	EDC solenoid data	15
	Control response	16
	EDC response time	
	Manual override (MOR)	
	Hydraulic displacement control (HDC)	18
	HDC principle	
	HDC operation	18
	Hydraulic signal pressure range	
	Pump output flow direction vs. control pressure	
	Control response	
	Response time, HDC	
	Swashplate angle sensor for EDC controls	
	Swash plate angle sensor parameters (EDC)	
	Swash plate angle sensor connector	
	Interface with ECU (EDC)	
	Manual displacement control (MDC)	
	MDC principle	
	MDC operation	
	MDC shaft rotation	
	Control response	
	MDC response time	
	Neutral start switch (NSS)	
	Case gauge port M14	
	Lever	
	Forward-neutral-reverse electic control (FNR)	
	FNR principle	
	Control response	
	Response time, FNR	
	Non feedback proportional electric control (NFPE)	
	Control signal requirements	
	·	
	Response time	
	Non-feedback, proportional hydraulic control (NFPH)	
	Control response	33

CCO solenoid data......38



Contents

	Displacement limiter	39
	Displacement change (approximate)	
	Speed sensor	
	Temperature Range	40
	Output pulses	
	Mating connectors	
	Speed sensor 4.5 – 8 V	
	Temperature Signal	
Operating parameters		
Operating parameters	Input speed	42
	·	
	System Pressure	
	Charge pressure	
	Charge pump inlet pressure	
	Case pressure	
	TemperatureViscosity	
	·	
System design paramete		45
	Filtration system	
	Filtration	
	Suction filtration	
	Charge pressure filtration	
	Independent braking system	
	Fluid selection	
	Reservoir	
	Case drain	
	Charge pump	
	Charge pump sizing/selection	
	Charge pump output flow	
	Bearing life and external shaft loading	
	Hydraulic unit life	51
	Mounting flange loads	
	Shaft torques	53
	Shaft selection	53
	Shaft torque and splines lubrication	53
	Shaft torque for tapered shafts	53
	Shaft availability and torque ratings	54
	Understanding and minimizing system noise	54
	Sizing equations	56
Model code		
	Model code (A - B - C)	57
	Model code (D)	
	Model code (F)	
	Model code (H - J - T)	
	Model code (K)	
	Model code (E - M - N - Z - L)	
	Model code (V - G - W)	
	Model code (X - Y)	
	model code (x 1,	
Installation drawings	28/22 ports	
	28/32 ports	
	38/45 ports	
	28/32 dimensions with speed spacer	
	28/32 dimensions with speed sensor	
	38/45 dimensions	
	38/45 dimensions with speed sensor	
	Input shafts: option G4, F6 (SAE B, 13 teeth)	
	Input shafts: option G1, F1 (SAE B, 14 teeth)	
	Input shafts: option G5, F5 (SAE B, 15 teeth)	//



Contents

Input shafts: option A7, A9 (SAE B, straight key shaft)	78
Input shafts: option G6, G7 (SAE B, 19 teeth)	79
Input shafts: option F2, F3 (SAE B, taper key shaft)	81
Auxiliary mounting: option A25, B25, C25, D25, E25, F25 (SAE B-B 15 teeth)	
Electric displacement control (EDC)	86
·	
AC connectors dimensions	
Suction filtration: option S	99
Remote full flow charge pressure filtration: option RRemote full flow charge pressure filtration:	100
External full flow charge pressure filtration: option E	101
	Input shafts: option G6, G7 (SAE B, 19 teeth)



General description

MP1 overview

The MP1 pump is a variable displacement axial piston pump intended for closed circuit medium power applications. The swashplate motion is controlled via compact hydraulic servo control system. A variety of controls are available. These include mechanic or electric actuated feedback controls, electric or hydraulic actuated non-feedback type controls, and a three-position electric control. These controls feature low hysteresis and responsive performance.

MP1 features

Designed for quality and reliability

- · Uniform design concept across frame sizes
- Single piece housing to minimize leaks
- Technologically advanced kit and servo system
- Predictable, low friction swashplate bearing for precise machine control

Machine integration benefits

- Industry leading pump length
- Clean side for easier machine integration
- Metric and Inch O-ring boss and Split flange (38/45 only) system port interfaces
- Standard connection interfaces

Greater total efficiency

- Increased pump efficiency
- Lower control pressure for less power consumption

Control options

- Electrical displacement control (EDC)
- Manual displacement control (MDC)
- Hydraulic displacement control (HDC)
- Automotive control (AC-1, AC-2)
- Forward-neutral-reverse (FNR)
- Non-feedback proportional electric (NFPE)
- Non-feedback proportional hydraulic (NFPH)
- Common control across entire family

Expanded functionality

- PLUS+1® Compliant control and options
- Easy integration with Telematics
- Integrated Flushing valve available

Modularity


- Common control, charge pump and auxiliary pad options
- Easy and quick conversion to the right configuration

6 | © Danfoss | February 2024 BC178386485160en-000601



General description

MP1 system diagram

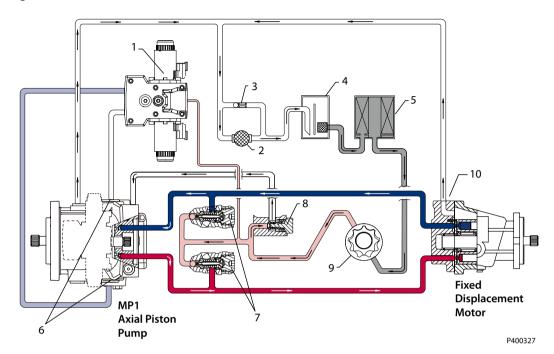

- Servo Pressure
- ☐ Charge Pressure
- 1. Control
- 4. Reservoir
- 7. Check Valves with High Pressure Relief Valves
- 10. Case Drain

- System High Pressure
- \square Case Flow
- 2. Heat Exchanger
- 5. Filter
- 8. Charge Relief Valve
- System Low Pressure
- \blacksquare Suction Flow
- 3. Heat Exchanger Bypass
- 6. Servo Piston
- 9. Charge Pump

MP1 28/32




MP1 38/45





General description

MP1 schematic

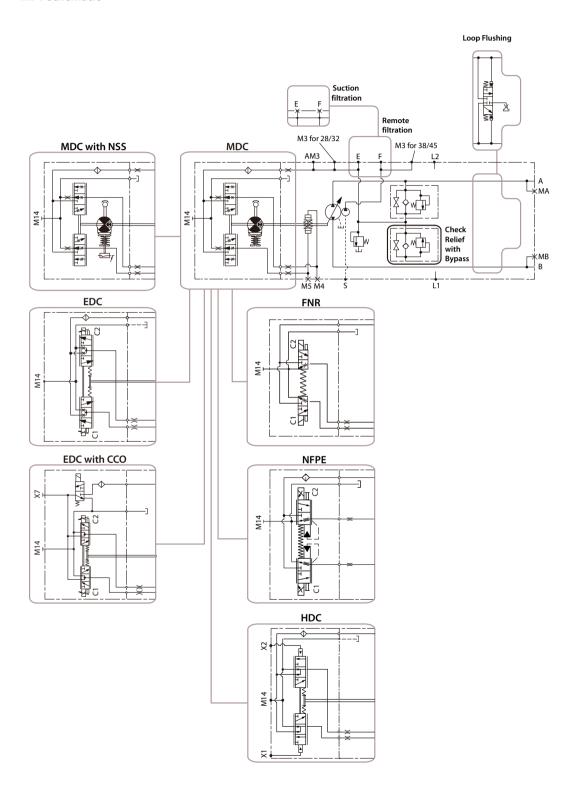

8 | © Danfoss | February 2024 BC178386485160en-000601



Technical specifications

MP1 design specifications

Features	MP1
Design	Axial piston pump with variable displacement using compact servo piston control.
Direction of input rotation	Clockwise or counterclockwise
Recommended installation position	Pump installation position is discretionary, however the recommended control position is on the top or at the side with the top position preferred. If the pump is installed with the control at the bottom, flushing flow must be provided through port M14 located on the EDC, HDC, FNR, NFPE, NFPH, AC-1, AC-2 and MDC control. Vertical input shaft installation is acceptable. The housing must always be filled with hydraulic fluid. Recommended mounting for a multiple pump stack is to arrange the highest power flow towards the input source. Consult Danfoss for non-conformance to these guidelines.
Filtration configuration	Suction or charge pressure filtration

MP1 technical data

Feature	28	32	38	45	
Displacement (cm³/rev [in³/rev])	28.0 [1.71]	31.8 [1.94]	38.0 [2.32]	45.1 [2.75]	
Flow at rated (continuous) speed (I/min [US gal/min])	95.3 [25.2]	108.1 [28.5]	125.3 [33.1]	149.5 [39.5]	
Torque at maximum displacement (N•m/bar [lbf•in/1000psi])	0.45 [272.0]	0.51 [308.9]	0.60 [369.1]	0.72 [438.1]	
Mass moment of inertia of rotating components (kg·m² [slug·ft²])	0.0020 [0.0015]	-	0.0030 [0.0022]	-	
Mass (kg [lb])	29.6 [65.3]		38 [83.8]		
Oil volume (liter [US gal])	1.5 [0.40]		2.0 [0.53]		
Mounting flange	ISO 3019-1 flange 1	101-2 (SAE B)			
Input shaft outer diameter, splines and tapered shafts		022mm - 4 (SAE B, 13 025mm - 4 (SAE B-B, 1			
	ISO 3019-1, outer & Key)	ž22mm - 1 (Straight	ISO 3019-1, outer Ø31mm - 4 (19 teeth) ISO 3019-1, outer Ø25mm - 4 (Straight Key) ISO 3019-1, outer Ø25mm -3 (Conical keyed, taper 1:8)		
Auxiliary mounting flange with metric fasteners, shaft outer diameter and splines	er ISO 3019-1, flange 82-2, outer Ø16mm - 4 (SAE A, 9 teeth) ISO 3019-1, flange 82-2, outer Ø19mm - 4 (SAE A, 11 teeth) ISO 3019-1, flange 101-2, outer Ø22mm - 4 (SAE B, 13 teeth) ISO 3019-1, flange 101-2, outer Ø25mm - 4 (SAE B-B, 15 teeth)				
	ISO 11926-1 - 1 1/16 - 12 (Inch O-ring boss)		ISO 11926-1 - 1 5/16 - 12 (Inch O-ring boss)		
Main port configuration A , B	ISO 6149-1, M27x2 (Metric o-ring boss)		ISO 6162, Ø19mm, (Split flange boss, M10x1.5)		
	150 6149-1, MI27X2	(Metric o-ring boss)	ISO 6149-1 - M33x2 (Metric O-ring boss)		
Case drain ports L1, L2		5-12 (Inch O-ring bos (Metric O-ring boss)			
Suction ports S	ISO 11926-1 - 1 1/1 boss) ISO 6149-1 - M27x2 boss)	, ,	ISO 11926-1 - 1 5/16-12 (Inch O-ring boss) ISO 6149-1 - M33x2 (Metric O-ring boss)		
Other ports	ISO 11926-1, (Inch ISO 6149 -1, (Metric				
Customer interface threads	Metric fasteners				

© Danfoss | February 2024 BC178386485160en-000601 | 9



Technical specifications

MP1 operating parameters

Features		Units	28/32	38/45
Input speed	Minimum ¹	min ⁻¹ (rpm)	500	500
	Rated		3400	3300
	Maximum		4000	3900
System pressure	Maximum working pressure	bar [psi]	350 [5000]	350 [5000]
	Maximum pressure		380 [5429]	380 [5429]
	Minimum low loop (above case)		10 [143]	10 [143]
Charge pressure (minimum)		bar [psi]	16 [232]	16 [232]
Charge pump inlet	Minimum (continuous)	bar (absolute) [in Hg vacuum]	0.8 [6]	0.8 [6]
pressure	Minimum (cold start)		0.2 [24]	0.2 [24]
	Maximum		2.0	2.0
Case pressure	Rated	bar [psi]	3 [43]	3 [43]
	Maximum		5 [71]	5 [71]

¹ No load condition. Refer to System Design Parameters/Charge Pump for details.

MP1 fluid specifications

Features		Units	28/32/38/45
Viscosity	Intermittent ¹	mm ² /sec. [SUS]	5 [42]
	Minimum		7 [49]
	Recommended range		12 - 80 [66 - 370]
	Maximum (cold start) ²		1600 [7500]
Temperature range ³	Minimum (cold start)	°C [°F]	-40 [-40]
	Recommended range		60 - 85 [140 - 185]
	Maximum continuous		104 [220]
	Maximum intermittent		115 [240]
Filtration (recommended	Cleanliness per ISO 4406		22/18/13
minimum)	Efficiency (charge pressure filtration)	β-ratio	β15-20=75(β10≥10)
	Efficiency (suction filtration)		β35-45=75(β10≥2)
	Recommended inlet screen mesh size	μm	100 - 125

¹ Intermittent=Short term t <1 min per incident and not exceeding 2 % of duty cycle based load-life.

10 | © Danfoss | February 2024

 $^{^{2}}$ Cold start = Short term t < 3 min, p < 50 bar [725 psi], n < 1000 min $^{-1}$ (rpm)

³ At the hottest point, normally case drain port.




MP1 high pressure relief valve (HPRV) and charge check

All MP1 pumps are equipped with a combination high pressure relief and charge check valve. The high-pressure relief function is a dissipative (with heat generation) pressure control valve for the purpose of limiting excessive system pressures. The charge check function acts to replenish the low-pressure side of the working loop with charge oil. Each side of the transmission loop has a dedicated HPRV valve that is non-adjustable with a factory set pressure. When system pressure exceeds the factory setting of the valve, oil is passed from the high pressure system loop, into the charge gallery, and into the low pressure system loop via the charge check.

The pump order code allows for different pressure settings to be used at each system port. The system pressure order code for pumps with only HPRV is a reflection of the HPRV setting.

HPRV's are factory set at a low flow condition. Any application or operating condition which leads to elevated HPRV flow will cause a pressure rise with flow above a valve setting. Consult factory for application review. Excessive operation of the HPRV will generate heat in the closed loop and may cause damage to the internal components of the pump.

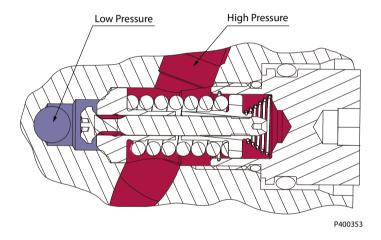

Bypass function

The bypass function allows a machine or load to be moved without rotating the pump shaft or prime mover. The single pump HPRV valve also provides a loop bypass function when each of the two HPRV hex plugs are mechanically backed out three full turns.

Engaging the bypass function mechanically connects both A & B sides of the working loop to the common charge gallery.

Possible damage to hydromotor(s).

Excessive speeds and extended load/vehicle movement must be avoided. The load or vehicle should be moved not more than 20% of maximum speed and for a duration not exceeding 3 minutes. When the bypass function is no longer needed, care should be taken to re-seat the HPRV hex plugs to the normal operating position.


© Danfoss | February 2024 BC178386485160en-000601 | 11



MP1 charge pressure relief valve (CPRV) function

An internal charge pressure relief valve (CPRV) regulates charge pressure within the hydraulic circuit. The CPRV is a direct acting poppet valve that regulates charge pressure at a designated level above case pressure.

The charge pressure relief valve setting is specified within the model code of the pump. MP1 pumps with charge pump have the CPRV set at 1800 rpm while MP1 pumps without charge pump have the CPRV set with 18.9 l/min [5.0 US gal/min] of external supply flow. The charge pressure rise rate, with flow, is approximately 1 bar/10 liter [5.4 psi/US gal].

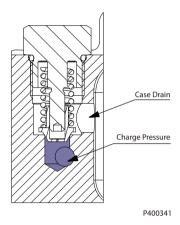




Loop flushing valve


MP1 pumps are available with an optional integral loop flushing. A loop flushing valve will remove heat and contaminants from the main loop at a rate faster than otherwise possible.

The MP1 loop flushing design is a simple spring centered shuttle spool with an orifice plug. The shuttle shifts at approximately 3.9 bar [55.7 psi]. The flushing flow is a function of the low loop system pressure (charge) and the size of the plug.

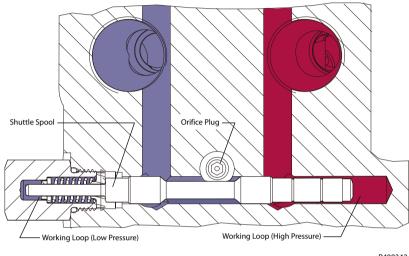

P400342

Loop flushing performance

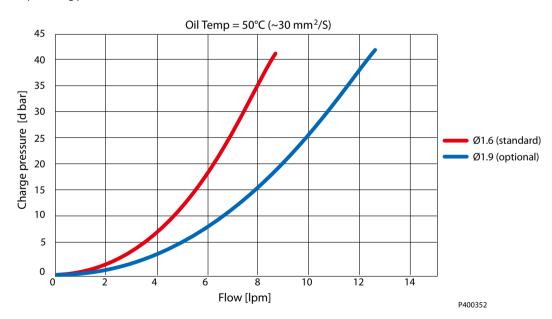

When a pump is used with an external loop flushing shuttle valve, ensure that the charge setting of the pump matches the setting of the loop flushing shuttle valve. Contact your Danfoss representative for the availability of additional charge relief settings.

© Danfoss | February 2024 BC178386485160en-000601 | 13



Electrical displacement control (EDC)


EDC principle

An EDC is a displacement (flow) control. Pump swashplate position is proportional to the input command and therefore vehicle or load speed (excluding influence of efficiency), is dependent only on the prime mover speed or motor displacement.


The Electrical Displacement Control (EDC) consists of a pair of proportional solenoids on each side of a three-position, four-way porting spool. The proportional solenoid applies a force input to the spool, which ports hydraulic pressure to either side of a double acting servo piston. Differential pressure across the servo piston rotates the swashplate, changing the pump's displacement from full displacement in one direction to full displacement in the opposite direction. Under some circumstances, such as contamination, the control spool could stick and cause the pump to stay at some displacement.

A 170 µm screen is located in the supply line immediately before the control porting spool.

EDC control

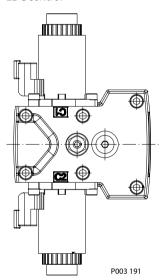

EDC schematic

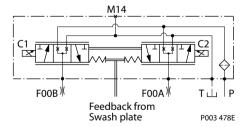

EDC operation

EDC's are current driven controls requiring a Pulse Width Modulated (PWM) signal. Pulse width modulation allows more precise control of current to the solenoids. The PWM signal causes the solenoid pin to push against the porting spool, which pressurizes one end of the servo piston, while draining the other. Pressure differential across the servo piston moves the swashplate.

A swashplate feedback link, opposing control links, and a linear spring provide swashplate position force feedback to the solenoid. The control system reaches equilibrium when the position of the swashplate spring feedback force exactly balances the input command solenoid force from the operator. As hydraulic pressures in the operating loop change with load, the control assembly and servo/swashplate system work constantly to maintain the commanded position of the swashplate.




The EDC incorporates a positive neutral deadband as a result of the control spool porting, preloads from the servo piston assembly, and the linear control spring. Once the neutral threshold current is reached, the swashplate is positioned directly proportional to the control current. To minimize the effect of the control neutral deadband, we recommend the transmission controller or operator input device incorporate a jump up current to offset a portion of the neutral deadband.

The neutral position of the control spool does provide a positive preload pressure to each end of the servo piston assembly.

When the control input signal is either lost or removed, or if there is a loss of charge pressure, the spring-loaded servo piston will automatically return the pump to the neutral position.

Control signal requirements, EDC MP1

Pump displacement vs. control current

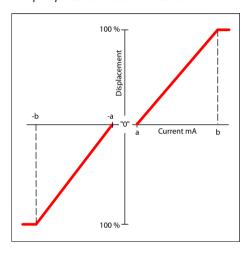

EDC control current

Voltage	12 V _{DC}	24 V _{DC}	
Minimum current to stroke pump	a*	640 mA	330 mA
	b	1640 mA	820 mA
Pin connections	any o	order	

Factory test current, for vehicle movement or application actuation expect higher or lower value.

EDC solenoid data

Description		12 V	24 V	
Maximum current		1800 mA	920 mA	
Nominal coil resistance	@ 20 °C [68 °F]	3.66 Ω	14.20 Ω	
	@ 80 °C [176 °F]	4.52 Ω	17.52 Ω	
Inductance		33 mH	140 mH	
PWM signal frequency	Range	70 – 200 Hz		
	Recommended*	100 Hz		
IP Rating IEC 60 529 DIN 40 050, part 9		IP 67		
		IP 69K with mating connector		
Connector color		Black		

PWM signal required for optimum control performance.

© Danfoss | February 2024 BC178386485160en-000601 | 15



Pump output flow direction vs. control signal

Shaft rotation	CW		ccw	
Coil energized*	C1	C2	C1	C2
Port A	out	in	in	out
Port B	in	out	out	in
Servo port pressurized	M4	M5	M4	M5

^{*} For coil location see Installation drawings.

Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swash-plate response to the application requirements (e.g. in the event of electrical failure).

The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure.

A swash-plate response times table is available for each frame size. Testing should be conducted to verify the proper orifice selection for the desired response. Typical response times at the following conditions:

```
\Delta p = 250 bar [3626 psi] Charge pressure = 20 bar [290 psi] Viscosity and temperature = 30 mm²/s [141 SUS] and 50 °C [122 °F] Speed = 1800 min⁻¹ (rpm)
```

MP1 EDC response time

Stroking direction	0.8 mm [0 orifice	.03 in]	1.0 mm [0.04 in] orifice		1.3 mm [0.05 in] orifice		No orifice	
	28/32	38/45	28/32	38/45	28/32	38/45	28/32	38/45
Neutral to full flow	1.3 s	2.1 s	0.9 s	1.3 s	0.6 s	0.9 s	0.4 s	0.6 s
Full flow to neutral	1.0 s	1.5 s	0.7 s	0.9 s	0.4 s	0.6 s	0.2 s	0.3 s

Manual override (MOR)


Initial actuation of the o-ring seal MOR plunger will require a force of 45 N. Additional actuations typically require less force to engage the MOR plunger. Proportional control of the pump via the MOR is not intended. The MOR plunger has a 4 mm diameter and must be manually depressed to be engaged. Depressing the plunger mechanically moves the control spool which allows the pump to go on stroke.


Unintended MOR operation can cause the pump to go into stroke.

The vehicle or device must always be in a safe condition (example: vehicle lifted off the ground) when using the MOR function. The MOR should be engaged anticipating a full stroke response from the pump.

Refer to control flow table for the relationship of solenoid to direction of flow.





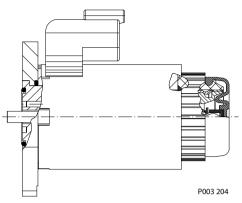




Hydraulic displacement control (HDC)

HDC principle


An HDC is a Hydraulic Displacement Control. Pump swashplate position is proportional to the input command and therefore vehicle speed or load speed (excluding influence of efficiency), is dependent only on the prime mover speed or motor displacement.

The HDC control uses a hydraulic input signal to operate a porting spool, which ports hydraulic pressure to either side of a double acting servo piston. The hydraulic signal applies a force input to the spool which ports hydraulic pressure to either side of a double acting servo piston. Differential pressure across the servo piston rotates the swashplate, changing the pump's displacement from full displacement in one direction to full displacement in the opposite direction. Under some circumstances, such as contamination, the porting spool could stick and cause the pump to stay at some displacement.

A serviceable 175 μm screen is located in the supply line immediately before the control porting spool. HDC control

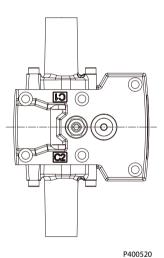

HDC schematic

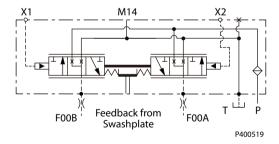

HDC operation

HDC's are hydraulically driven control which ports hydraulic pressure to either side of a porting spool, which pressurizes one end of the servo piston, while draining the other end to case. Pressure differential across the servo piston moves the swashplate.


A swashplate feedback link, opposing control linkage, and a linear spring provide swashplate position force feedback to the hydraulic pressure. As hydraulic pressures in the operating loop change with load, the control assembly and servo/swashplate system work constantly to maintain the commanded position of the swashplate.



The HDC incorporates a positive neutral dead band as a result of the control spool porting, preloads from the servo piston assembly, and the linear control spring. Once the neutral threshold point is reached, the swashplate is positioned directly proportional to the control pressure.

When the control input is either lost or removed, or if there is a loss of charge pressure, the spring loaded servo piston will automatically return the pump to the neutral position.

Pump displacement vs signal pressure

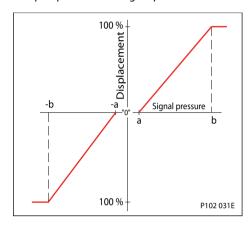

Hydraulic signal pressure range

Option	Туре	a*	b*	Max. pressure
T1	Standard	4.2 bar	16.2 bar	30 bar
T2	Option	3 bar	11.6 bar	30 bar

 $^{^{*}}$ Factory test current, for vehicle movement or application actuation expect a higher or lower value.

Pump output flow direction vs. control pressure

Shaft rotation HDC	Clockwise (CW) seen from shaft		Counter Clockwise (CCW) seen from shaft		
Port energized	X1	X2	X1	X2	
Port A	Out (high)	In (low)	In (low)	Out (high)	
Port B	In (low)	Out (high)	Out (high)	In (low)	
Servo port high pressure	M4	M5	M4	M5	

For appropriate performance of HDC characteristic, keep the drain pressure of pilot valve to be equal or slightly higher than pump case pressure.

Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swash-plate response to the application requirements (e.g. in the event of electrical failure).

The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure.

A swash-plate response times table is available for each frame size. Testing should be conducted to verify the proper orifice selection for the desired response. Typical response times at the following conditions:

 Δ p = 250 bar [3626 psi] Charge pressure = 20 bar [290 psi] Viscosity and temperature = 30 mm²/s [141 SUS] and 50 °C [122 °F] Speed = 1800 min⁻¹ (rpm)



Response time, HDC

		1.0 mm [0.0	.0 mm [0.04 in] orifice		1.3 mm [0.05 in] orifice		No orifice	
direction	28/32	38/45	28/32	38/45	28/32	38/45	28/32	38/45
Neutral to full flow	1.3 s	2.1 s	0.9 s	1.3 s	0.6 s	0.9 s	0.3 s	0.6 s
Full flow to neutral	1.0 s	1.5 s	0.7 s	0.9 s	0.4 s	0.6 s	0.2 s	0.3 s

20 | $^{\odot}$ Danfoss | February 2024




Swashplate angle sensor for EDC controls

The angle sensor detects the swash plate position with an accuracy dependent upon the calibration effort done for the application and direction of rotation from the neutral position. At minimum the sensor can be used for forward, neutral and reverse (FNR) detection.

The sensor works on the hall-effect technology. The implemented technology is based on a measurement of the magnetic field direction in parallel to the chip surface. This field direction is converted to a voltage signal at the output.

Enhanced calibration of the non-linear behavior leads to more exact calculation of the pump swashplate angle. The 4-pin DEUTSCH connector is part of the sensor housing. The swashplate angle sensor is available for all EDC controls for 12 V and 24 V.

Swashplate angle vs. output of supply voltage

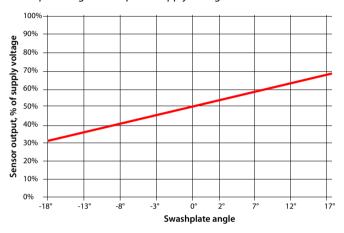

A Warning

Strong magnetic fields in the proximity of the sensor can influence the sensor signal and must be avoided.

Contact your Danfoss representative in case the angle sensor will be used for safety functions.

Swash plate angle sensor parameters (EDC)

Parameter	Minimum	Typical	Maximum
Supply voltage range	4.5 V _{DC}	5 V _{DC}	5.5 V _{DC}
Supply protection	-	-	18 V _{DC}
Pump neutral output (% of supply voltage)	-	50%	-
Working range (swash plate angle)	-18°	-	18°
Required supply current	-	-	30 mA
Output current signal	-	9 mA	11 mA
Working temperature	−40 °C	80 °C	115 ℃

Electrical Protection	Standard	Class
IP Rating	IEC 60 529	IP 67
	DIN 40 050, part 9	IP 69K with mating connector
EMC Immunity	ISO 11452-2	100 V/m

© Danfoss | February 2024 BC178386485160en-000601 | 21



Calibration of the sensor output within the software is mandatory. Vehicle neutral thresholds in the software $(\pm 0.5^{\circ})$ are vehicle dependent and must consider different conditions, example: system temperature, system pressure and/or shaft speed.

For safety function: If the sensor fails (invalid signal <10% or >90% of supply voltage), it must be sure that the ECU will go into a diagnostic mode and shift into limited mode in order for the driver to take the full control or the mechanical breaks should be activated. Strong magnetic fields in the proximity of the sensor can influence the sensor signal and must be avoided.

Swash plate angle sensor connector

Connector DEUTSCH, 4-pin



Pin assignment:


- 1. Ground (GND)
- 2. Not connected
- 3. Output signal 1 (SIG 1)
- **4.** Supply (V+)

Connector order numbers

Description	Quantity	Order number
Mating connector DEUTSCH DTM06-4S-E004	1	11105824
Wedge lock WM-4S	1	not available
Socket contact 0462-201-2031	3	Tiot available
Mating connector kit	1	11212713

Interface with ECU (EDC)

Interface with ECU diagram

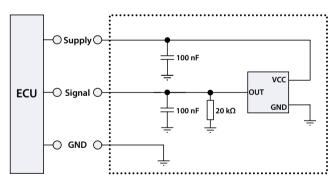

Manual displacement control (MDC)

MDC principle

An MDC is a Manual proportional Displacement Control (MDC). The MDC consists of a handle on top of a rotary input shaft. The shaft provides an eccentric connection to a feedback link. This link is connected on its one end with a porting spool. On its other end the link is connected the pumps swashplate.

This design provides a travel feedback without spring. When turning the shaft the spool moves thus providing hydraulic pressure to either side of a double acting servo piston of the pump.

Differential pressure across the servo piston rotates the swash plate, changing the pump's displacement. Simultaneously the swashplate movement is fed back to the control spool providing proportionality between shaft rotation on the control and swashplate rotation.




The MDC changes the pump displacement between no flow and full flow into opposite directions. Under some circumstances, such as contamination, the control spool could stick and cause the pump to stay at some displacement.


A 170 µm screen is located in the supply line immediately before the control porting spool.

The MDC is sealed by means of a static O-ring between the actuation system and the control block. Its shaft is sealed by means of a special O-ring which is applied for low friction. The special O-ring is protected from dust, water and aggressive liquids or gases by means of a special lip seal.


Manual Displacement Control

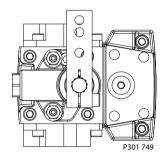

Pump displacement vs. control lever rotation

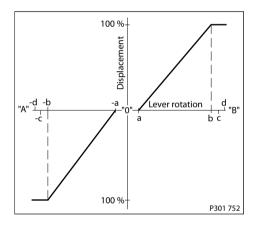

MDC schematic diagram

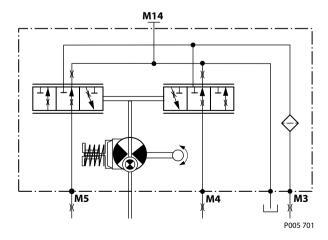

Where:

Deadband on **B** side – $\mathbf{a} = 3^{\circ} \pm 1^{\circ}$

Maximum pump stroke – $\mathbf{b} = 30^{\circ} + 2/-1^{\circ}$



Required customer end stop – $\mathbf{c} = 36^{\circ} \pm 3^{\circ}$ Internal end stop – $\mathbf{d} = 40^{\circ}$

MDC torque

Torque required to move handle to maximum displacement	1.4 N·m [12.39 lbf•in]
Torque required to hold handle at given displacement	0.6 N•m [5.31 lbf•in]
Maximum allowable input torque	20 N•m [177 lbf•in]

MDC operation

The MDC provides a mechanical dead-band required to overcome the tolerances in the mechanical actuation. The MDC contains an internal end stop to prevent turning the handle into any inappropriate position.

The MDC provides a permanent restoring moment appropriate for turning the MDC input shaft back to neutral position only. This is required to take the backlash out of the mechanical connections between the Bowden cable and the control.


High case pressure may cause excessive wear and the NSS to indicate that the control is not in neutral position. In addition, if the case pressure exceeds 5 bar there is a risk of an insufficient restoring moment. The MDC is designed for a maximum case pressure of 5 bar and a rated case pressure of 3 bar.

- Customers must install some support to limit the setting range of their Bowden cable to avoid an overload of the MDC.
- Customers can apply their own handle design but they must care about a robust clamping connection between their handle and the control shaft and avoid overload of the shaft.
- Customers can connect two MDC's on a tandem unit in such a way that the actuation force will be transferred from the pilot control to the second control. The kinematic of the linkages must ensure that either control shaft is protected from torque overload.

Caution

Using the internal spring force on the input shaft is not an appropriate way to return the customer connection linkage to neutral, or to force a Bowden cable or a joystick back to neutral position. It is not applicable for any limitation of the Bowden cable stroke, except the applied torque to the shaft will never exceed 20 N·m.

MDC shaft rotation

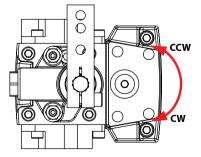

Pump shaft rotation*	Clockwise (CW)		Counter-clockwise (CCW)	
MDC shaft rotation	cw	ccw	cw	ccw
Port A	in (low)	out (high)	out (high)	in (low)
Port B	out (high)	in (low)	in (low)	out (high)
Servo port high pressure	M5	M4	M5	M4

As seen from shaft side.



Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swash-plate response to the application requirements (e.g. in the event of electrical failure).

The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure.

A swash-plate response times table is available for each frame size. Testing should be conducted to verify the proper orifice selection for the desired response. Typical response times at the following conditions:

 Δ p = 250 bar [3626 psi] Charge pressure = 20 bar [290 psi] Viscosity and temperature = 30 mm²/s [141 SUS] and 50 °C [122 °F] Speed = 1800 min⁻¹ (rpm)

MP1 MDC response time

Code	Orifice description (mm)				Stroking o	lirection (sec)	
	Р	Α	В	Tank (A	Neutral to	full flow	Full flow to	neutral
				+B)	28/32	38/45	28/32	38/45
C1	-	0.8	0.8	-	1.3	1.8	0.9	1.2
C2	-	1.3	1.3	_	0.5	0.7	0.4	0.5
С3	-	-	-	_	0.3	0.3	0.3	0.3
C4	-	1.0	1.0	-	0.8	1.1	0.6	0.8
C6	-	-	-	1.0	0.5	1.0	0.5	0.7
C7	-	-	-	1.3	0.4	0.7	0.5	0.5
C8	0.8	-	-	0.6	1.5	2.6	1.4	1.9
С9	1.0	-	-	0.6	1.3	2.4	1.1	1.8
D1	1.0	-	-	0.8	0.9	1.6	0.8	1.1
D2	1.3	-	-	0.8	0.8	1.5	0.7	1.1
D3	1.3	-	-	1.0	0.6	1.1	0.6	0.8
D4	1.3	1.3	1.3	1.0	0.8	1.3	0.7	0.9
D5	0.6	0.8	0.8	0.6	3.2	4.0	2.0	2.9
E2	1.0	0.8	0.8	0.8	2.1	2.9	1.2	1.7


Neutral start switch (NSS)

The Neutral Start Switch (NSS) contains an electrical switch that provides a signal of whether the control is in neutral. The signal in neutral is Normally Closed (NC).

© Danfoss | February 2024 BC178386485160en-000601 | 25



Neutral start switch schematic

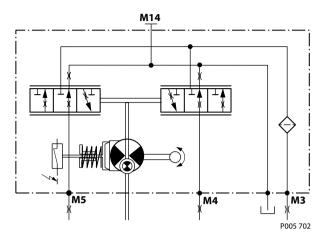


Neutral start switch data

Max. continuous current with switching	8.4 A
Max. continuous current without switching	20 A
Max. voltage	36 V _{DC}
Electrical protection class	IP67 / IP69K with mating connector

Case gauge port M14


The drain port should be used when the control is mounted on the unit's bottom side to flush residual contamination out of the control.

MDC w/h drain port shown

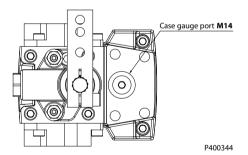




MDC schematic diagram

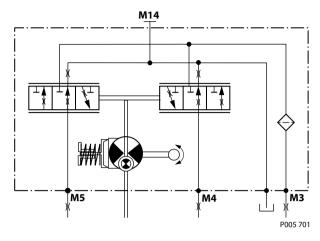

Lever

MDC controls are available with optional lever/handle. Align with Settings: Y module in the model code. Standard orientation 90° from input shaft

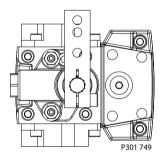

Forward-neutral-reverse electic control (FNR)

FNR principle


The 3-position **FNR** control uses an electric input signal to switch the pump to a full stroke position. Under some circumstances, such as contamination, the control spool could stick and cause the pump to stay at some displacement.

A 170 μm screen is located in the supply line immediately before the control porting spool.


© Danfoss | February 2024




Forward-Neutral-Reverse electric control (FNR)

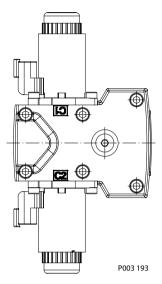

FNR hydraulic schematic

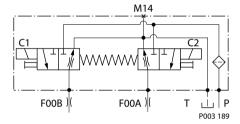

Pump displacement vs. electrical signal

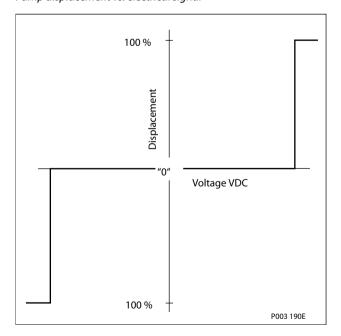



Control current

Voltage	Min. current to stroke pump	Pin connections
12 V	750 mA	any order
24 V	380 mA	

DEUTSCH connector, 2-pin



Connector ordering data

Description	Quantity	Ordering data
Mating connector	1	DEUTSCH DT06-2S
Wedge lock	1	DEUTSCH W2S
Socket contact (16 and 18 AWG)	2	DEUTSCH 0462-201-16141
Danfoss mating connector kit	1	K29657

Solenoid data

Voltage	12 V	24 V	
Minimum supply voltage	9.5 V _{DC}	19 V _{DC}	
Maximum supply voltage (continuous)	14.6 V _{DC}	29 V _{DC}	
Maximum current	1050 mA	500 mA	
Nominal coil resistance @ 20 °C [70 °F]	8.4 Ω	34.5 Ω	
PWM Range	70-200 Hz		
PWM Frequency (preferred)*	100 Hz		
IP Rating (IEC 60 529) + DIN 40 050, part 9	IP 67 / IP 69K (part 9 with mating connector)		
Bi-directional diode cut off voltage	28 V _{DC}	53 V _{DC}	

^{*} PWM signal required for optimum control performance.

Pump output flow direction vs. control signal

Shaft rotation	CW		cw ccw		
Coil energized*	C1	C2	C1	C2	
Port A	in	out	out	in	
Port B	out	in	in	out	
Servo port pressurized	M5	M4	M5	M4	

^{*} For coil location see Installation Drawings.

Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swash-plate response to the application requirements (e.g. in the event of electrical failure).

The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure.



A swash-plate response times table is available for each frame size. Testing should be conducted to verify the proper orifice selection for the desired response. Typical response times at the following conditions:

 Δ p = 250 bar [3626 psi] Charge pressure = 20 bar [290 psi] Viscosity and temperature = 30 mm²/s [141 SUS] and 50 °C [122 °F] Speed = 1800 min⁻¹ (rpm)

Response time, FNR

Stroking			1.0 mm [0.0	.0 mm [0.04 in] orifice		1.3 mm [0.05 in] orifice		No orifice	
direction	28/32	38/45	28/32	38/45	28/32	38/45	28/32	38/45	
Neutral to full flow	2.1 s	2.6 s	1.1 s	1.6 s	0.8 s	1.1 s	0.7 s	0.7 s	
Full flow to neutral	1.1 s	1.8 s	0.9 s	1.0 s	0.6 s	0.7 s	0.3 s	0.3 s	


Non feedback proportional electric control (NFPE)

The Non Feedback Proportional Electric (**NFPE**) control is an electrical automotive control in which an electrical input signal activates one of two proportional solenoids that port charge pressure to either side of the pump servo cylinder. The NFPE control has no mechanical feedback mechanism.


A serviceable 170 µm screen is located in the supply line immediately before the control porting spool.

Under some circumstances, such as contamination, the control spool could stick and cause the pump to stay at some displacement.

NFPE control

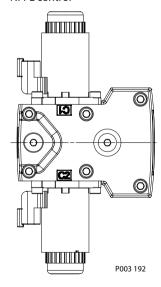


NFPE schematic

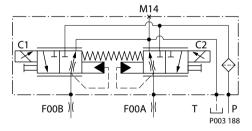

The pump displacement is proportional to the solenoid signal current, but it also depends upon pump input speed and system pressure. This characteristic also provides a power limiting function by reducing the pump swashplate angle as system pressure increases. A typical response characteristic is shown in the accompanying graph. Under some circumstances, such as contamination, the control spool could stick and cause the pump to stay at some displacement.



NFPE pump displacement to input signal

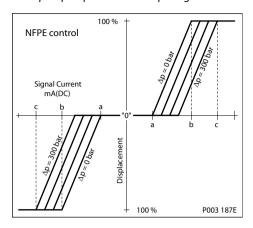


Control signal requirements

Control current

Voltage	a*	b	с	Pin connections
12 V	600 mA	1080 mA	1360 mA	any order
24 V	300 mA	540 mA	680 mA	

^{*} Factory test current, for vehicle movement or application actuation expect higher or lower value.

DEUTSCH connector, 2-pin



Connector ordering data

Description	Quantity	Ordering data
Mating connector	1	DEUTSCH DT06-2S
Wedge lock	1	DEUTSCH W2S
Socket contact (16 and 18 AWG)	2	DEUTSCH 0462-201-16141
Danfoss mating connector kit	1	K29657

Description		12 V	24 V
Maximum current		1800 mA	920 mA
Nominal coil resistance	@ 20 °C [68 °F]	3.66 Ω	14.20 Ω
	@ 80 °C [176 °F]	4.52 Ω	17.52 Ω
Inductance		33 mH	140 mH
PWM signal frequency	Range	70 – 200 Hz	
	Recommended*		
IP Rating IEC 60 529 IP 67			
DIN 40 050, part 9		IP 69K with mating connector	
Connector color		Black	

^{*} PWM signal required for optimum control performance.

© Danfoss | February 2024



Pump output flow direction vs. control signal

Shaft rotation	CW		CW CCW		
Coil energized*	C1	C2	C1	C2	
Port A	in	out	out	in	
Port B	out	in	in	out	
Servo port pressurized	M5	M4	M5	M4	

^{*} For coil location see Installation drawings.

Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swashplate response to the application requirements (e.g. in the event of electrical failure). The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure. A swashplate response table is available for each frame indicating available swashplate response times. Testing should be conducted to verify the proper orifice selection for the desired response.

Typical response times at the following conditions:

Δр	250 bar [3626 psi]
Viscosity and temperature 30 mm ² /s [141 SUS] and 50°C [122 °F]	
Charge pressure	24 bar [348 psi]
Speed	1800 min ⁻¹ (rpm)

Response time

Stroking 0.8 mm [0.03] orif		orifice	1.0 mm [0.04] orifice		1.3 mm [0.05] orifice	
direction	28/32	38/45	28/45	38/45	28/45	38/45
Neutral to full flow	1.5 s	2.2 s	0.9 s	1.4 s	0.6 s	0.8 s
Full flow to neutral	0.9 s	1.1 s	0.6 s	0.7 s	0.4 s	0.5 s

Non-feedback, proportional hydraulic control (NFPH)

The non-feedback proportional hydraulic (NFPH) control is a hydraulic proportional control in which an input pressure signal directly controls the pump servo piston to achieve pump displacement.

MP1 pumps with NFPH control have a special servo cylinder capable of providing proportional control with a hydraulic input.


Swashplate position is proportional to the differential signal pressure at ports X1 and X2, but displacement is also dependent on pump speed and system pressure. This characteristic of non-feedback controls provides a natural power limiting function by reducing the pump swashplate angle as system pressure increases. The accompanying graph shows typical operating characteristics.

The system may require tuning through the pump orifice combinations, control pressure supply line sizing, actuation device output pressure and flow adjustments to achieve proper vehicle performance characteristics.

32 | © Danfoss | February 2024




Non-feedback proportional hydraulic control schematic

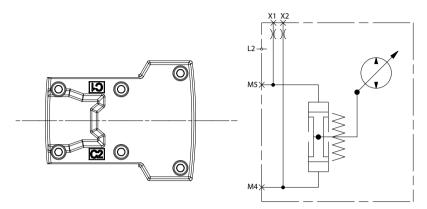

Pump flow direction with NFPH control

Input Shaft Rotation	CW CCW			
Port A flow	Out	In	In	Out
Port B flow	In	Out	Out	In
High servo gauge port	M4	M5	M4	M5

NFPH pump displacement to Input signal

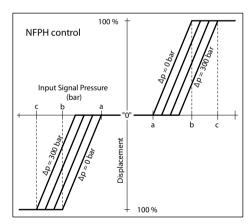

NFPH input signal pressure (bar)

Frame size	a	b	С
28/32	5.5	13.7	17
38/45	5	12.75	16

The values provided in the table above are approximations at 1800 RPM and system delta pressures as indicated in the graph provided. The values are dependent on input speed and delta pressure operating conditions.

Control response

MP1 controls are available with optional control passage orifices to assist in matching the rate of swashplate response to the application requirements (e.g. in the event of electrical failure). The time required for the pump output flow to change from zero to full flow (acceleration) or full flow to zero (deceleration) is a net function of spool porting, orifices, and charge pressure. A swashplate response



table is available for each frame indicating available swashplate response times. Testing should be conducted to verify the proper orifice selection for the desired response.

Typical response times at the following conditions:

Δp 250 bar [3626 psi]	
/iscosity and temperature 30 mm ² /s [141 SUS] and 50°C [122 °F]	
Charge pressure	24 bar [348 psi]
Speed	1800 min ⁻¹ (rpm)


Response time

Stroking direction	0.8 mm [0.03] orifice		1.0 mm [0.04] orifice		1.3 mm [0.05] orifice	
	28/32	38/45	28/45	38/45	28/45	38/45
Neutral to full flow	1.5 s	2.2 s	0.9 s	1.4 s	0.6 s	0.8 s
Full flow to neutral	0.9 s	1.1 s	0.6 s	0.7 s	0.4 s	0.5 s

Automotive control (AC)

The Automotive control (AC) is an electric NFPE control with an integrated micro-controller, installed on the pump.

The integrated micro-controller enhanced control performance with a flexible, configurable control scheme for an entire single path propel transmission. It can be used in combination with fixed and variable displacement hydraulic motors. With the pre-installed application software and easily changeable control parameters, it is possible to tailor the vehicle's driving behavior to the individual requirements of the customer.

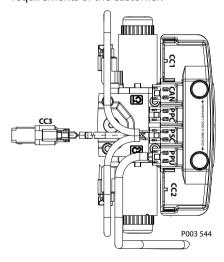

The H1 automotive control is divided into 2 systems:

- AC-1
- AC-2

AC-2 is an extension of AC-1 that features an integrated pump swash plate angle sensor and software enabled functions such as swash plate control.



Mode types

The application software provides 3 different hydrostatic propel methods, defined as mode types, which can be used individually.

Automotive Load dependent	Torque controlled driving behavior. Setpoint for the drive curve is the engine rpm.
Non-Automotive Load independent	Speed controlled driving mode. Setpoint for the drive curve is a joystick or drive pedal signal, independent of the engine rpm. The best performance will achieved with an AC-2 Swash Plate Sensor.
Creep-Automotive Load dependent	Torque controlled driving behavior (like Automotive). Setpoint for the drive curve is the engine rpm. The setpoint can be reduced by the creep potentiometer if a high engine rpm in combination with low vehicle speed is needed.

Basic functions

- Four selectable system modes, selectable via switch
- Individual settings for forward and reverse driving direction (4 x 2 curves)
- Independent pump and hydraulic motor profiling and ramping for each mode
- Electric drive pedal connection
- Electronic inching function without separate control valve
- · Electric creep mode potentiometer
- Configurable System Mode and Direction change
- Load independent pump displacement control with integrated Swash Plate Angle Sensor (AC-2)
- Hydraulic motor displacement control including brake pressure defeat function

Performance functions

- · ECO fuel saving mode with automatic reduction of the engine speed during transport (Cruise control)
- · Vehicle constant speed drive control
- · Vehicle speed limitation
- Dynamic brake light, automatic park brake, reverse buzzer and status LED outputs
- Vehicle speed controlled output function
- Temperature compensation for predictable performance
- Advanced CAN J1939 interface for the information exchange with the vehicle control system

Protection and safety functions

- Safety controlled vehicle start protection with engine speed check, battery check and FNR must be in neutral, etc.
- Operator presence detection
- Hydraulic system overheat and low-temperature protection
- Hydraulic motor over speed protection
- Park brake test mode for roller applications to fulfill SAE J1472/EN500-4
- SIL2 compliant



Engine control and protection

- CAN J1939 engine interface
- Engine speed control via drive pedal with safety controlled monitoring function
- Engine antistall protection
- · Engine over speed protection during inching
- Engine speed dependent retarder control
- Engine cold start protection

Installation features

- Factory calibration for hysteresis compensation
- Starting current adjustment in the factory
- Pre-installed application software and parameter files

For more information, see *Integrated Automotive Control (AC) for MP1 and H1P Single Pumps 28-250 Technical Information*, BC152986482596.

36 | © Danfoss | February 2024



Control-cut-off valve (CCO valve)

The pump offers an optional control cut off valve integrated into the control. This valve will block charge pressure to the control, allowing the servo springs to de-stroke the pump regardless of the pump's primary control input. There is also a hydraulic logic port, X7, which can be used to control other machine functions, such as spring applied pressure release brakes. The pressure at X7 is controlled by the control cut off solenoid. The X7 port would remain plugged if not needed.

In the normal (de-energized) state of the solenoid charge flow is prevented from reaching the controls. At the same time the control passages and the X7 logic port are connected and drained to the pump case. The pump will remain in neutral, or return to neutral, independent of the control input signal. Return to neutral time will be dependent on oil viscosity, pump speed, swashplate angle, and system pressure.

When the solenoid is energized, charge flow and pressure is allowed to reach the pump control. The X7 logic port will also be connected to charge pressure and flow.

The solenoid control is intended to be independent of the primary pump control making the control cut off an override control feature. It is however recommended that the control logic of the CCO valve be maintained such that the primary pump control signal is also disabled whenever the CCO valve is deenergized. Other control logic conditions may also be considered.


All EDC and MDC controls are available with a CCO valve.

The response time of the unit depends on the control type and the control orifices used.


The CCO-valve is available with 12 V or 24 V solenoid.

EDC with CCO

Control

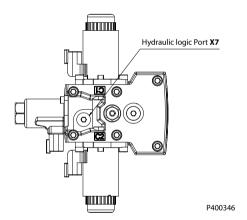

Schematic

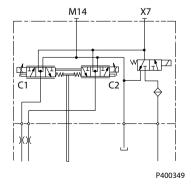


© Danfoss | February 2024 BC178386485160en-000601 | 37




MDC with CCO

Control

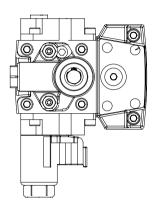

Schematic

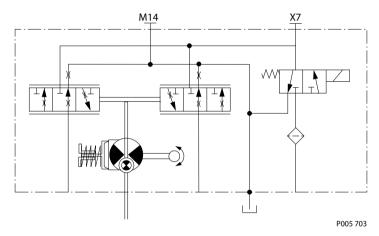



CCO solenoid data

Nominal supply voltage	12 V	24 V		
Supply voltage	Maximum		29 V	
	Minimum	9.5 V	19 V	
Bi-directional diode cut off voltage	28 V	53 V		
Nominal coil resistance at 20 °C	Nominal coil resistance at 20 °C			
Supply current	Maximum	850 mA	430 mA	
	Minimum	580 mA	300 mA	
PWM frequency	PWM frequency Range		50 – 200 Hz	
	Preferred	100 Hz		
Electrical protection class		IP67 / IP69K with ma	ting connector	

38 | $^{\odot}$ Danfoss | February 2024



CCO solenoids are design for battery voltage application within the voltage range in the table above, in consideration of a wide range of environmental temperature common for known hydraulic applications. Closed loop PWM current supply can be also applied and is helpful in case that the voltage range is exceeded, or ambient temperature could rise in an unusual manner.

Brake gauge port with MDC



Caution


It is not recommended to use brake port for any external flow consumption to avoid malfunction of CCO function.

Displacement limiter

All pumps are designed with optional mechanical displacement (stroke) limiters factory set to max. displacement.

The maximum displacement of the pump can be set independently for forward and reverse using the two adjustment screws to mechanically limit the travel of the servo piston. Adjustment procedures are found in the Service Manual. Adjustments under operating conditions may cause leakage. The adjustment screw can be completely removed from the threaded bore if backed out to far.

Displacement limiter

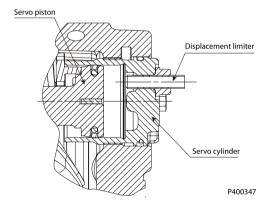

Displacement change (approximate)

Parameter	28	32	38	45
1 Turn of displacement limiter screw	2.9 cm ³ [0.18 in ³]	3.3 cm ³ [0.20 in ³]	3.56 cm ³ [0.22 in ³]	4.22 cm ³ [0.26 in ³]
Internal wrench size	4 mm			
External wrench size	13 mm			
Torque for external hex seal lock nut	23 N·m [204 lbf·in]			

© Danfoss | February 2024 BC178386485160en-000601 | 39



Speed sensor

The speed sensor is designed for rugged outdoor, mobile or heavy industrial speed sensing applications. The detection of the speed is contactless and does not need any calibration or adjustments.

For more information, see *Speed and Temperature Sensor, Technical Information*, **BC152886482203**.

Temperature Range

Parameter	Minimum	Maximum
Operation temperature range	-40 °C	104 ℃

 115° C intermittent = short term; t < 1min per incident and not exceeding 2 % of duty cycle based load-life.

Output pulses

The expected number of output pulses per revolution is shown below.

The number of output (speed) pulses

MP1P size	28/32	38/45
Pulses (per rev)	9	11


Mating connectors

There are available two types of mating connectors Assembly Bag DEUTSCH DTM06-6S, Black and Grey.

Ordering number				
11033865 11033863				
Assembly Bag, DEUTSCH DTM06-6S-E004; black, (24-20 AWG) 0.21 -0.52 mm ²	Assembly Bag, DEUTSCH DTM06-6S, gray, (24-20 AWG) 0.21 -0.52 mm ²			

Speed sensor 4.5 - 8 V

Speed sensor connector, 6-pin

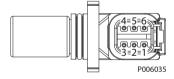

- 1. Speed signal 2
- **2.** NC
- **3.** Speed signal 1
- 4. Supply
- **5.** Ground
- 6. Temperature

Technical data

Parameter	Min.	Nom.	Max.	Note
Supply voltage	4.5 V _{DC}	5 V _{DC}	8 V _{DC}	Regulated supply voltage. Reverse polarity protected.
Supply protection	_	_	30 V _{DC}	Shuts off above 9 V.
Max. required supply current	_	_	25 mA	At supply voltage
Max. output current	-	_	50 mA	
Operation mode	NPN & PNP		Push-Pull amplifier	
Temperature signal	-40°C = 2.318V	-	100°C = 0.675V	
Output low	5 %	8.5 %	12 %	Ratiometric output voltage Low state > 0 V to provide wire fault detection



Technical data (continued)

Parameter	Min.	Nom.	Max.	Note
Output high	88 %	91.5 %	95 %	
Detectable frequency range	1 Hz	-	10 000 Hz	
Ordering number	149055			
Color of connector	Black			

Temperature Signal

For calculation of the case fluid temperature and the output signal voltage, see the formulas below:

V_O – Measured output voltage (V)

$$V_0 = (-3.88 \cdot 10^{-6} \cdot T^2) + (-1.15 \cdot 10^{-2} \cdot T) + 1.8639$$

T – Temperature (°C)

$$T = -1481.96 + \sqrt{2.1962 \cdot 10^{.6} + \frac{(1.8639 - V_o)}{3.88 \cdot 10^{.6}}}$$


Output signal voltage vs. Temperature

Temperature	range						
-55 °C**	-40 °C	-30 °C	0 °C	+30 °C*	+80 °C	+100 °C	+130 °C**
2.485 V	2.318 V	2.205 V	1.864 V	1.515 V	0.919 V	0.675 V	0.303 V

^{*} Accuracy: ±1. 5 to ± 4 °C

Response time in fluid

T_{90} definition

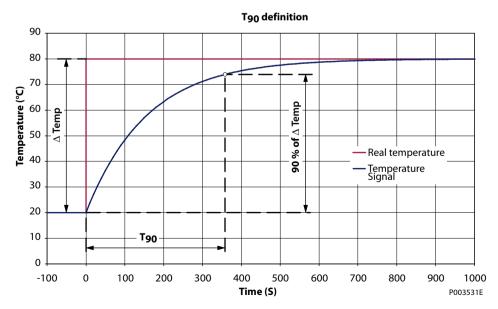

Response time in fluid $(T_{90}) = 360 \text{ s}$

^{**} Accuracy: ±2.5 to ± 5 °C



Operating parameters

Input speed

Minimum speed is the lowest input speed recommended during engine idle condition. Operating below minimum speed limits pump's ability to maintain adequate flow for lubrication and power transmission.

Rated speed is the highest input speed recommended at full power condition. Operating at or below this speed should yield satisfactory product life.

Maximum speed is the highest operating speed permitted. Exceeding maximum speed reduces product life and can cause loss of hydrostatic power and braking capacity. Never exceed the maximum speed limit under any operating conditions.

Operating conditions between Rated speed and Maximum speed should be restricted to less than full power and to limited periods of time. For most drive systems, maximum unit speed occurs during downhill braking or negative power conditions.

During hydraulic braking and downhill conditions, the prime mover must be capable of providing sufficient braking torque in order to avoid pump over speed. This is especially important to consider for turbocharged and Tier 4 engines.



Warning

Unintended vehicle or machine movement hazard.

Exceeding maximum speed may cause a loss of hydrostatic drive line power and braking capacity. You must provide a braking system, redundant to the hydrostatic transmission, sufficient to stop and hold the vehicle or machine in the event of hydrostatic drive power loss.

System Pressure

System pressure is the differential pressure between system ports A and B. It is the dominant operating variable affecting hydraulic unit life. High system pressure, which results from high load, reduces expected life. Hydraulic unit life depends on the speed and normal operating, or weighted average, pressure that can only be determined from a duty cycle analysis.

Application pressure is the high pressure relief setting normally defined within the order code of the pump. This is the applied system pressure at which the driveline generates the maximum calculated pull or torque in the application.

Maximum working pressure is the highest recommended Application pressure. Maximum working pressure is not intended to be a continuous pressure. Propel systems with Application pressures at, or below, this pressure should yield satisfactory unit life given proper component sizing.

Maximum pressure is the highest allowable Application pressure under any circumstance. Application pressures above Maximum Working Pressure will only be considered with duty cycle analysis and factory approval. Pressure spikes are normal and must be considered when reviewing maximum working pressure.

All pressure limits are differential pressures referenced to low loop (charge) pressure. Subtract low loop pressure from gauge readings to compute the differential.

Minimum low loop pressure (above case pressure) is the lowest pressure allowed to maintain a safe working condition in the low side of the loop.

42 | © Danfoss | February 2024



Operating parameters

Charge pressure

An internal charge relief valve regulates charge pressure. Charge pressure maintains a minimum pressure in the low side of the transmission loop.

The charge pressure setting listed in the order code is the set pressure of the charge relief valve with the pump in neutral, operating at 1800 min⁻¹ [rpm], and with a fluid viscosity of 32 mm²/s [150 SUS]. Pumps configured with no charge pump (external charge supply) are set with a charge flow of 18.9 I/min [5.0 US gal/min] and a fluid viscosity of 32 mm²/s [150 SUS].

The charge pressure setting is referenced to case pressure.

Charge pump inlet pressure

At normal operating temperature charge inlet pressure must not fall below rated charge inlet pressure (vacuum).

Minimum charge inlet pressure is only allowed at cold start conditions. In some applications it is recommended to warm up the fluid (e.g. in the tank) before starting the engine and then run the engine at limited speed until the fluid warms up.

Maximum charge pump inlet pressure may be applied continuously.

Case pressure

Under normal operating conditions, the rated case pressure must not be exceeded. During cold start case pressure must be kept below maximum intermittent case pressure. Size drain plumbing accordingly.



Caution

Possible component damage or leakage

Operation with case pressure in excess of stated limits may damage seals, gaskets, and/or housings, causing external leakage. Performance may also be affected since charge and system pressure are additive to case pressure.

Temperature

The high temperature limits apply at the hottest point in the transmission, which is normally the motor case drain. The system should generally be run at or below the rated temperature.

The maximum intermittent temperature is based on material properties and should never be exceeded.

Cold oil will not affect the durability of the transmission components, but it may affect the ability of oil to flow and transmit power; therefore temperatures should remain 16 °C [30 °F] above the pour point of the hydraulic fluid.

The minimum temperature relates to the physical properties of component materials. Size heat exchangers to keep the fluid within these limits. Danfoss recommends testing to verify that these temperature limits are not exceeded.

Ensure fluid temperature and viscosity limits are concurrently satisfied.



Operating parameters

Viscosity

Viscosity For maximum efficiency and bearing life, ensure the fluid viscosity remains in the recommended range.

The **minimum viscosity** should be encountered only during brief occasions of maximum ambient temperature and severe duty cycle operation.

The **maximum viscosity** should be encountered only at cold start.



Filtration system

To prevent premature wear, ensure that only clean fluid enters the hydrostatic transmission circuit. A filter capable of controlling the fluid cleanliness to ISO 4406, class 22/18/13 (SAE J1165) or better, under normal operating conditions, is recommended. These cleanliness levels cannot be applied for hydraulic fluid residing in the component housing/case or any other cavity after transport.

Filtration strategies include suction or pressure filtration. The selection of a filter depends on a number of factors including the contaminant ingression rate, the generation of contaminants in the system, the required fluid cleanliness, and the desired maintenance interval. Filters are selected to meet the above requirements using rating parameters of efficiency and capacity.

Filter efficiency can be measured with a Beta ratio (β_X). For simple suction-filtered closed circuit transmissions and open circuit transmissions with return line filtration, a filter with a β -ratio within the range of $\beta_{35-45} = 75$ ($\beta_{10} \ge 2$) or better has been found to be satisfactory. For some open circuit systems, and closed circuits with cylinders being supplied from the same reservoir, a higher filter efficiency is recommended. This also applies to systems with gears or clutches using a common reservoir. For these systems, a charge pressure or return filtration system with a filter β -ratio in the range of $\beta_{15-20} = 75$ ($\beta_{10} \ge 10$) or better is typically required.

Because each system is unique, only a thorough testing and evaluation program can fully validate the filtration system. Please see *Design Guidelines for Hydraulic Fluid Cleanliness Technical Information*, **BC152886482150** for more information.

Cleanliness level and β_x -ratio ¹				
Filtration	Cleanliness per ISO 4406		22/18/13	
(recommended minimum)	Efficiency (charge pressure filtration)	β-ratio	$\beta_{15-20} = 75 \ (\beta_{10} \ge 10)$	
	Efficiency (suction and return line filtration)	β-ratio	$\beta_{35-45} = 75 \ (\beta_{10} \ge 2)$	
	Recommended inlet screen mesh size	μm	100 – 125	

 $^{^1}$ Filter β_x -ratio is a measure of filter efficiency defined by ISO 4572. It is defined as the ratio of the number of particles greater than a given diameter ("x" in microns) upstream of the filter to the number of these particles downstream of the filter.

Filtration


Suction filtration

A suction circuit uses an internal charge pump. The filter is placed between the reservoir and the charge pump inlet. Do not exceed the inlet vacuum limits during cold start conditions.

© Danfoss | February 2024



Suction filtration

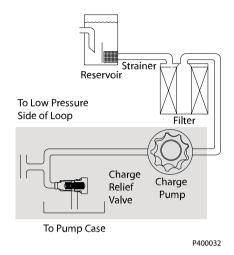


Charge pressure filtration

In a pressure filtration system the pressure filter is remotely mounted in the circuit, downstream of the charge supply. Pressure filtration is possible with, and without, an internal charge pump. Filters used in charge pressure filtration circuits should be rated to at least 35 bar [508 psi] pressure. Danfoss recommends locating a 100 – 125 micron screen in the reservoir or in the charge inlet when using charge pressure filtration.

A filter bypass valve is necessary to prevent damage to the hydrostatic system. In the event of high pressure drop associated with a blocked filter or cold start-up conditions, fluid may bypass the filter temporarily. Avoid working with an open bypass for an extended period. A visual or electrical bypass indicator is preferred. Proper filter maintenance is mandatory.

Charge pressure filtration

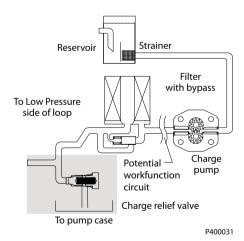

46 | © Danfoss | February 2024



Independent braking system



Warning

Unintended vehicle or machine movement hazard.

The loss of hydrostatic drive line power, in any mode of operation (forward, neutral, or reverse) may cause the system to lose hydrostatic braking capacity. You must provide a braking system, redundant to the hydrostatic transmission, sufficient to stop and hold the vehicle or machine in the event of hydrostatic drive power loss.

Fluid selection

Ratings and performance data are based on operating with hydraulic fluids containing oxidation, rust and foam inhibitors. These fluids must possess good thermal and hydrolytic stability to prevent wear, erosion, and corrosion of pump components.



Caution

Never mix hydraulic fluids of different types.

Reservoir

The hydrostatic system reservoir should accommodate maximum volume changes during all system operating modes and promote de-aeration of the fluid as it passes through the tank.

A suggested minimum total reservoir volume is 5/8 of the maximum charge pump flow per minute with a minimum fluid volume equal to 1/2 of the maximum charge pump flow per minute. This allows 30 seconds fluid dwell for removing entrained air at the maximum return flow. This is usually adequate to allow for a closed reservoir (no breather) in most applications.

Locate the reservoir outlet (charge pump inlet) above the bottom of the reservoir to take advantage of gravity separation and prevent large foreign particles from entering the charge inlet line. A 100-125 µm screen over the outlet port is recommended.

Position the reservoir inlet (fluid return) to discharge below the normal fluid level, toward the interior of the tank. A baffle (or baffles) will further promote de-aeration and reduce surging of the fluid.

Case drain

The pump housing must remain full of oil at all times. The MP1 pump is equipped with two case drain ports to provide flexibility for hose routing and pump installation. Connect a line from one of the case drain ports to the reservoir. Case drain fluid is typically the hottest fluid in the system.

Charge pump

Charge flow is required on MP1 pumps. The charge pump provides flow to make up for system leakage, maintain a positive pressure in the main circuit, and provide flow for cooling and filtration.

Many factors influence the charge flow requirements and the resulting charge pump size selection. These factors include system pressure, pump speed, pump swashplate angle, type of fluid, temperature, size of heat exchanger, length and size of hydraulic lines, auxiliary flow requirements, hydrostatic motor type, etc. When initially sizing and selecting hydrostatic units for an application, it is frequently not possible to have all the information necessary to accurately evaluate all aspects of charge pump size selection.

Unusual application conditions may require a more detailed review of charge pump sizing. Charge pressure must be maintained at a specified level under all operating conditions to prevent damage to the transmission. Danfoss recommends testing under actual operating conditions to verify this.



Charge pump sizing/selection

In most applications a general guideline is that the charge pump displacement should be at least 10 % of the total displacement of all components in the system. Unusual application conditions may require a more detailed review of charge flow requirements. Please refer to *Selection of Drive line Components*, **BC157786484430** for a detailed procedure.

System features and conditions which may invalidate the 10 % guideline include (but are not limited to):

- Continuous operation at low input speeds {< 1500 min⁻¹ (rpm)}
- High shock loading and/or long loop lines
- High input shaft speeds
- LSHT motors with large displacement and/or multiple LSHT motors
- High flushing flow requirements
- Automotive style operation where input speeds fluctuate or operate below 800 min-1 (rpm)


Contact your Danfoss representative for application assistance if your application includes any of these conditions.



Charge pump output flow

Charge pump flow and power curves, 9/12 cm³

Charge pressure: 20 bar [290 psi] Viscosity: 11 mm²/s [63 SUS] Temperature: 80 °C [176 °F]

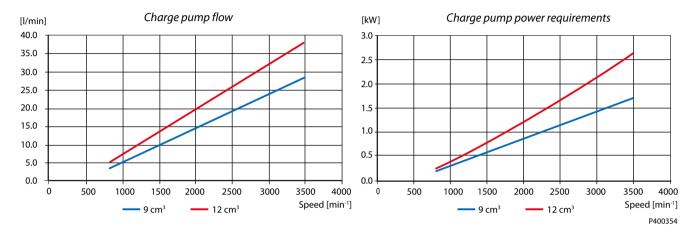

Bearing life and external shaft loading

Bearing life is a function of speed, system pressure, charge pressure, and swashplate angle, plus any external side or thrust loads. Other life factors include oil type and viscosity. The influence of swashplate angle includes displacement as well as direction. External loads are found in applications where the pump is driven with side/thrust load (belt or gear) as well as in installations with misalignment and improper concentricity between the pump and drive coupling. All external side loads will act to reduce the normal bearing life of a pump.

In vehicle propel drives with no external shaft loads and where the system pressure and swashplate angle are changing direction and magnitude regularly, the normal B10 bearing life (90% survival) will exceed the hydraulic load-life of the unit.

In non propel drives such as vibratory drives, conveyor drives, or fan drives, the operating speed and pressure are often nearly constant and the swashplate angle is predominantly at maximum. These drives have a distinctive duty cycle compared to a propulsion drive. In these types of applications a bearing life review is recommended.

MP1 pumps are designed with bearings that can accept some external radial. When external loads are present, the allowable radial shaft loads are a function of the load position relative to the mounting flange, the load orientation relative to the internal loads, and the operating pressures of the hydraulic unit. In applications where external shaft loads can not be avoided, the impact on bearing life can be minimized by proper orientation of the load. Optimum pump orientation is a consideration of the net loading on the shaft from the external load, the pump rotating group, and the charge pump load.

© Danfoss | February 2024 BC178386485160en-000601 | 49



- In applications where the pump is operated such that nearly equal amounts of forward vs reverse swashplate operation is experienced; bearing life can be optimized by orientating the external side load to the 0 or 180 deg position (90 deg to rotating group load Fb). See drawing.
- In applications where the pump is operated such that the swashplate is predominantly (>75%) on one side of neutral (e.g. vibratory, conveyor, typical propel); bearing life can be optimized by orientating the external side load generally opposite of the internal rotating group load, Fb. The direction of the internal loading is a function of rotation and system port, which has flow out.
- Avoid axial thrust loads in either direction.

The **maximum allowable radial loads** (Re), based on the **maximum external moment** (Me) and the distance (L) from the mounting flange to the load, may be determined from the tables below and the cross section drawing.


The maximum allowable radial load is calculated as: $R_e = M_e / L$

Contact your Danfoss representative for an evaluation of unit bearing life if continuously applied external radial loads are 25% or more of the maximum allowable, or if thrust loads are known to exist. Use tapered output shafts or clamp-type couplings where radial shaft side loads are present.

Shaft loading parameters

Re	Maximum external radial load	
Me	Maximum external moment	
L	Distance from mounting flange to point of load	
Fb	Internal rotating group load	
Te	Thrust external load	
Fcp	Force of charge pump	

External radial shaft load

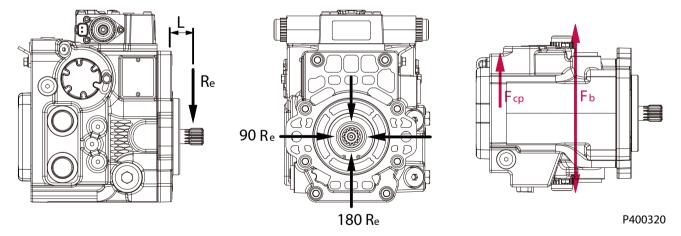

50 | © Danfoss | February 2024



Hydraulic unit life

Hydraulic unit life is defined as the fatigue life expectancy of the hydraulic components. It is a function of speed and system pressure; however, system pressure is the dominant variable. High pressure, which results from high load, reduces expected hydraulic unit life.

System component selection is based on determination of the application maximum loads and speeds. Testing is recommended to secure duty cycle data in which to predict hydraulic unit life. Contact your Danfoss representative for assistance in unit life determination. If duty cycle data is not available, normal input power and maximum pump displacement can be used to determine an application pressure in which to predict life.

MP1 pumps will meet most application hydraulic unit life expectancies if applied within the parameters specified in this manual and chosen considering the guidelines within Danfoss publication *Selection of Driveline Components* **BC157786484430**. For more detailed information on hydraulic unit life, see Danfoss publication *Pressure and Speed Limits* **BC152886484313**.

Mounting flange loads

Shock load moment is the result of an instantaneous jolt to the system. **Continuous load moments** are generated by the typical vibratory movement of the application. Avoid excessive loading of the mounting flange such as adding tandem mounted auxiliary pumps and/or subjecting pumps to high shock loads. Design pump applications to stay within the allowable shock load moment and allowable continuous load moment.

Use the following formulas to estimate overhung load moment for multiple pump mountings:

$$M_S = G_S (W_1L_1 + W_2L_2 + ... + W_nL_n)$$

$$M_C = G_C (W_1L_1 + W_2L_2 + ... + W_nL_n)$$

Refer to the *Installation Drawings* section to find pump length (L). Refer to the table *Technical Specifications* in the *Specifications* section, to find pump weight (W). An exact measure of W will depend on the pump's features.

Overhung loading parameters

Ms	Shock load moment
M _c	Continuous load moment
G _s	Maximum shock acceleration (Gs)
Gc	Continuous (vibratory) acceleration (Gs)
W _n	Weight of nth pump
Ln	Distance from mounting flange to center of gravity of nth pump

The tables below show allowable overhung load moment values. If system parameters exceed these values add additional pump support.


Allowable overhung parameters

Frame size	Continuous load moment (M _c) 10 ⁷ cycles N·m [in·lbf]	Shock load moment (M _s) 10 ³ cycles N·m [in·lbf]
28/32	1100 [9736]	2000 [17702]
38/45	1500 [13276]	2800 [24782]

© Danfoss | February 2024



Shaft loading parameters

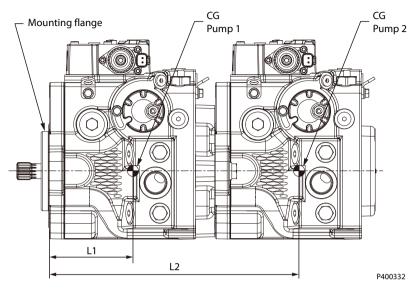

This illustration shows two single pumps in tandem.

Estimated maximum and continuous acceleration factors for some typical applications are shown. Applications which experience extreme resonant vibrations may require additional pump support. Typical continuous (vibratory) values can vary significantly due to changes in engine and pump configuration and mounting methods.

G-factors for sample applications

Application	Continuous (vibratory) acceleration (G _c)	Maximum (shock) acceleration (G _s)
Trencher (rubber tires)	3	8
Asphalt paver	2	6
Windrower	2	5
Aerial lift	1.5	4
Turf care vehicle	1.5	4
Vibratory roller	6	10

^{*} Applications which experience extreme resonant vibrations require addition pump support.

52 | © Danfoss | February 2024 BC178386485160en-000601



Shaft torques

Shaft selection

Base shaft selection on a review of the maximum torque required by the application and the maximum torque available from the prime mover. Application duty cycle and continuous torque rating of the prime mover are the main variable to consider when selecting a shaft.

Shaft torque and splines lubrication

The **rated torque** is a measure of tooth wear and is the torque level at which a normal spline life of 1 x 10^7 shaft revolutions can be expected. The rated torque presumes a regularly maintained minimum level of lubrication via a moly-disulfide grease in order to reduce the coefficient of friction and to restrict the presence of oxygen at the spline interface. It is also assumed that the mating spline has a minimum hardness of R_c 55 and full spline depth. The rated torque is proportional to the minimum active spline length.

However, a spline running in oil-flooded environment provides superior oxygen restriction in addition to contaminant flushing. The rated torque of a flooded spline can increase to that of the maximum published rating. A flooded spline would be indicative of a pump driven by a pump drive or plugged into an auxiliary pad of a pump.

Maximum torque ratings are based on torsional fatigue strength considering 1×10^5 full load reversing cycles.

Maintaining a spline engagement at least equal to the pitch diameter will also maximize spline life. Spline engagements of less than ¾ pitch diameter are subject to high contact stress and spline fretting.

Shaft torque for tapered shafts

The **rated torque** is based on the contact pressure between the shaft and hub surfaces with poor contact areas. With increased quality of the contact areas, the contact pressure between shaft and hub is increased, allowing higher torque to be transmitted.

A key is intended as an installation aid only. Any torque carried by the key as a result of poor contact area or mis-alignment will limit the torque carrying capability of the shaft significantly.

Maximum torque rating is based on an ideal contact area of 100% and the retaining nut properly torqued. This allows for the highest contact pressure between the shaft and the mating hub.

© Danfoss | February 2024 BC178386485160en-000601 | 53




Shaft availability and torque ratings

Alignment between the mating spline's Pitch Diameters is another critical feature in determining the operating life of a splined drive connection. Plug-in, or rigid spline drive installations can impose severe radial loads on the shafts.

The radial load is a function of the transmitted torque and shaft eccentricity. Increased spline clearance will not totally alleviate this condition; BUT, increased spline clearance will prevent mechanical interference due to misalignment or radial eccentricity between the pitch diameters of the mating splines. Spline life can be maximized if an intermediate coupling is introduced between the bearing supported splined shafts.

Multiple pump installations must consider the loads from the entire pump stack and all torques are additive. Charge pumps loads must also be included.

Through torque diagram

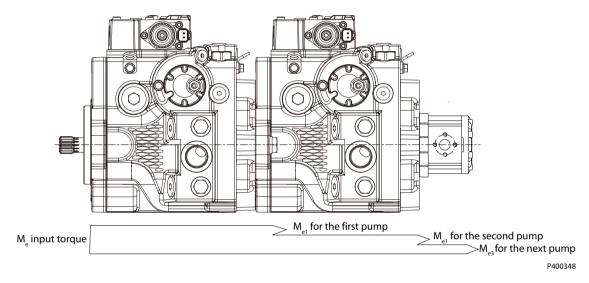

Attention

Torque required by auxiliary pumps is additive. Ensure requirements do not exceed shaft torque ratings.

Understanding and minimizing system noise

Noise is transmitted in fluid power systems in two ways: as fluid borne noise, and structure borne noise.

Fluid-borne noise (pressure ripple or pulsation) is created as pumping elements discharge oil into the pump outlet. It is affected by the compressibility of the oil, and the pump's ability to transition pumping elements from high to low pressure. Pulsations travel through the hydraulic lines at the speed of sound until there is a change (such as an elbow) in the line. Amplitude varies with overall line length and position.

Structure borne noise is transmitted wherever the pump casing connects to the rest of the system. The way system components respond to excitation depends on their size, form, material, and mounting.

System lines and pump mounting can amplify pump noise.

Follow these suggestions to help minimize noise in your application:

- Use flexible hoses.
- · Limit system line length.
- If possible, optimize system line position to minimize noise.



- If you must use steel plumbing, clamp the lines.
- If you add additional support, use rubber mounts.
- Test for resonance in the operating range; if possible avoid them.



Sizing equations

The following equations are helpful when sizing hydraulic pumps. Generally, the sizing process is initiated by an evaluation of the machine system to determine the required motor speed and torque to perform the necessary work function.

	Based on SI units			Based on US units	
Flow	Output flow Q =	$\frac{V_{\rm g} \bullet n \bullet \eta_{\rm v}}{1000}$	(l/min)	Output flow Q =	$\frac{V_{_g} \bullet n \bullet \eta_{_v}}{231} \text{ (US gal/min)}$
Torque	Input torque M=	$\frac{V_{_g} \bullet \Delta p}{20 \bullet \pi \bullet \eta_{_m}}$	(N•m)	Input torque M=	$\frac{V_{\rm g} \bullet \Delta p}{2 \bullet \pi \bullet \eta_{\rm m}} \qquad \text{(Ibf-in)}$
Power	Input power P = $\frac{M}{30}$	$\frac{\mathbf{n} \cdot \mathbf{n}}{000} = \frac{\mathbf{Q} \cdot \Delta \mathbf{p}}{600 \cdot \mathbf{n}}$) (kW)	Input power P = $\frac{M}{198}$	$\frac{\mathbf{e} \cdot \mathbf{n} \cdot \mathbf{\pi}}{6000} = \frac{\mathbf{Q} \cdot \Delta \mathbf{p}}{1714 \cdot \mathbf{\eta}_{t}} (hp)$

Variables

SI units [US units]

V_g = Displacement per revolution cm³/rev [in³/rev]
 p_O = Outlet pressure bar [psi]

p_i = Inlet pressure bar [psi]

 Δp = $p_0 - p_i$ (system pressure) bar [psi]

 \mathbf{n} = Speed min⁻¹ (rpm)

η_v = Volumetric efficiency

 η_m = Mechanical efficiency

 η_t = Overall efficiency $(\eta_v \cdot \eta_m)$

First, the motor is sized to transmit the maximum required torque. The pump is then selected as a flow source to achieve the maximum motor speed. Refer to *Selection of Drive Line Components*, **BC157786484430**, for a more complete description of hydrostatic drive line sizing.



Model code (A - B - C)



A - displacement and rotation

Code	Description
28R	28 cm ³ , clockwise (right hand)
28L	28 cm ³ , counterclockwise (left hand)
32R	32 cm ³ , clockwise (right hand)
32L	32 cm ³ , counterclockwise (left hand)
38R	38 cm ³ , clockwise (right hand)
38L	38cm³, counterclockwise (left hand)
45R	45 cm ³ , clockwise (right hand)
45L	45 cm ³ , counterclockwise (left hand)

B - product version and unit

Code	Description
AS	Product Version "A", Inch, Customer port sealing according to ISO 11926-1
AM	Product Version "A", Metric , Customer port sealing according to ISO 6149-1

C - automotive control and inching

Code	Description
NNN	None

© Danfoss | February 2024



Model code (D)



Code	Control type Voltage Options		Options	Port	Connect or
SA2		12V	_	Inch	DEUTSCH
SA3		24V	_	Inch	DEUTSCH
SA4		12V	Manual override	Inch	DEUTSCH
SA5		24V	Manual override	Inch	DEUTSCH
SE7		12V	Control cut-off	Inch	DEUTSCH
SE8		24V	Control cut-off	Inch	DEUTSCH
SG8	EDC	12V	Manual override, control cut-off	Inch	DEUTSCH
SH1	Electric displacement control	24V	Manual Override, Control Cut-Off	Inch	DEUTSCH
MA4		12V	Manual override	Metric	DEUTSCH
MA5		24V	Manual override	Metric	DEUTSCH
MG8		12V	Manual override, control Cut-Off	Metric	DEUTSCH
MH1		24V	Manual Override, Control Cut-Off	Metric	DEUTSCH
SH2		12V	Angle Sensor	Inch	DEUTSCH
SH7 ¹⁾		24V	Angle Sensor, Manual Override	Inch	DEUTSCH
SM1		-	Standard	Inch	-
SM2		-	Neutral Start Switch	Inch	DEUTSCH
MM1		-	Standard	Metric	-
MM2		-	Neutral Start Switch	Metric	DEUTSCH
SM3		12V	Control Cut-Off	Inch	DEUTSCH
SM4		24V	Control Cut-Off	Inch	DEUTSCH
SM5	MDC	12V	Control cut-off, neutral start switch	Inch	DEUTSCH
SM6	Manual displacement control	24V	Control cut-off, neutral start switch	Inch	DEUTSCH
MM3		12V	Control cut-off	Metric	DEUTSCH
MM4		24V	Control cut-off	Metric	DEUTSCH
MM5		12V	Control cut-off, neutral start switch	Metric	DEUTSCH
MM6		24V	Control cut-off, neutral start switch	Metric	DEUTSCH
SA9		12V	Manual override	Inch	DEUTSCH
SB1	FNR	24V	Manual override	Inch	DEUTSCH
MA9	Forward-neutral-reverse	12V	Manual override	Metric	DEUTSCH
MB1		24V	Manual override	Metric	DEUTSCH
SN1		12V	Manual override	Inch	DEUTSCH
SN2	NFPE Non-feedback proportional	24V	Manual override	Inch	DEUTSCH
MN1	electric	12V	Manual override	Metric	DEUTSCH
MN2		24V	Manual override	Metric	DEUTSCH
SNN	NFPH	-	-	Inch	-
MNN	Non-feedback proportional hydraulic	-	-	Metric	-
AJ1	AC-1 automotive control	12 V	Manual override	-	DEUTSCH

58 | © Danfoss | February 2024 BC178386485160en-000601



D - controls (continued)

Code	Control type	Voltage	Options	Port	Connect or
AJ3	AC-2 automotive control	12 V	Angle sensor, manual override	-	DEUTSCH
AU1	AC-1	12 V	Manual override w/out PPU wiring	-	DEUTSCH
AU3	AC-2	12 V	Angle sensor, manual override, w/out PPU wiring	-	DEUTSCH

^{1) 28/32} only

Code	Control type	Control input pressure	Port
ST1	HDC Hydraulic	4.2 - 16.2 bar	Inch
MT1	displacement control	4.2 - 16.2 bar	Metric
ST2		3.0 - 11.6 bar	Inch
MT2		3.0 - 11.6 bar	Metric

Align each with options **B**: Product Version, **E**: Displacement limitation, **F**: Orifices, and **W**: Special hardware features

Model code (F)



F – orifices

Code	Orifice			Controls: (X marks compatible use)			
	Tank (A+B)	Р	A/B	EDC, FNR	MDC	NFPE, AC	NFPH
С3	No orifice		•	Х	Х		
C1			0.8 mm	Х	Х	Х	X
C2			1.3 mm	Х	Х	Х	X
C4			1.0 mm	Х	Х	Х	Х
C6	1.0 mm				Х		
C 7	1.3 mm				Х		
C8	0.6 mm	0.8 mm			Х		
С9	0.6 mm	1.0 mm			Х		
D1	0.8 mm	1.0 mm			Х		
D2	0.8 mm	1.3 mm			Х		
D3	1.0 mm	1.3 mm			Х		
D4	1.0 mm	1.3 mm	1.3 mm		Х		
D5	0.6 mm	0.6 mm	0.8 mm		Х		
E2	0.8 mm	1.0 mm	0.8 mm		Х		

© Danfoss | February 2024 BC178386485160en-000601 | 59



Model code (H - J - T)



H - mounting flange

Code	Description
F	ISO 3019-1, flange 101-2 (SAE B)

J-input shaft

Code	Description		32	38	45
G4	ISO 3019-1, outer dia. 22 mm (SAE B, 13 teeth splined shaft 16/32 pitch)	Х	Х	Х	Х
F6	ISO 3019-1, outer dia. 22 mm (SAE B, 13 teeth splined shaft 16/32 pitch -SPCL bearing (high capacity)	Х	Х	Х	Х
G5	ISO 3019-1, outer dia. 23 mm (SAE B 15 teeth splined shaft 16/32 pitch)	Х	Х	Х	Х
F5	ISO 3019-1, outer dia. 23 mm (SAE B 15 teeth splined shaft 16/32 pitch -SPCL bearing (high capacity)	Х	Х	Х	Х
F2	Conical keyed shaft similar to ISO 3019-1 code 25-3, taper*			Х	Х
A8	Round straight keyed Ø25.4 mm*			Х	Х
A7	Round straight keyed Ø22.23 mm*	Х	Х		
A9	Round straight keyed Ø22.23 mm in-SPCL Bearing (High Capacity)*	Х	Х		
G1	ISO 3019-1, outer dia. 31.58 mm (SAE B, 14 teeth splined shaft 12/24 pitch)			Х	Х
G6	ISO 3019-1, outer dia. 31.24 mm (SAE B 19 teeth splined shaft 16/32 pitch)			Х	Х
G7	ISO 3019-1, outer dia. 31.24 mm (SAE B 19 teeth splined shaft 16/32 pitch - SPCL bearing (high capacity)			Х	Х
F1	ISO 3019-1, outer dia. 31.58 mm (SAE B 14 teeth splined shaft 12/24 pitch -SPCL bearing (high capacity)			Х	Х
F3	Conical keyed shaft similar to ISO 3019-1 code 25-3, taper - SPCL bearing (high capacity)			Х	Х
A6	Round straight keyed Ø25.4mm - SPCL bearing (high capacity)			Х	Х

^{* (}key not supplied with shaft)

T - filtration

Code	Description	Note
E	External charge flow filtration	Align with K: charge pump and auxiliary pad (no charge pump options)
R	Remote full charge flow filtration	Align with K: charge pump and auxiliary Pad
S	Suction filtration	(9 cc or 12 cc charge pump options)

60 | © Danfoss | February 2024 BC178386485160en-000601



Model code (K)



K-charge pump and auxiliary pad

Code	Description	28	32	38	45
A16	9 cm ³ /rev charge pump, SAE A 9 tooth (w/shipping cover), inch	•	•	•	•
B16	9 cm ³ /rev charge pump, SAE A 9 tooth (w/shipping cover), metric	•	•	•	•
A19	9 cm ³ /rev charge pump, SAE A 11 tooth (w/shipping cover), inch	•	•	•	•
B19	9 cm ³ /rev charge pump, SAE A 11 tooth (w/shipping cover), metric	•	•	•	•
A22	9 cm ³ /rev charge pump, SAE B 13 tooth (w/shipping cover), inch	•	•	•	•
B22	9 cm ³ /rev charge pump, SAE B 13 tooth (w/shipping cover), metric	•	•	•	•
A25	9 cm ³ /rev charge pump, SAE B-B 15 tooth (w/shipping cover), inch			•	•
B25	9 cm ³ /rev charge pump, SAE B-B 15 tooth (w/shipping cover), metric			•	•
ANN	9 cm ³ /rev charge pump, none, SAE cover, inch	•	•	•	•
BNN	9 cm ³ /rev charge pump, none, SAE cover, metric	•	•	•	•
C16	12 cm ³ /rev charge pump, SAE A 9 tooth (w/shipping cover), inch	•	•	•	•
D16	12 cm ³ /rev charge pump, SAE A 9 tooth (w/shipping cover), metric	•	•	•	•
C19	12 cm ³ /rev charge pump, SAE A 11 tooth (w/shipping cover), inch	•	•	•	•
D19	12 cm ³ /rev charge pump, SAE A 11 tooth (w/shipping cover), metric	•	•	•	•
C22	12 cm ³ /rev charge pump, SAE B 13 tooth (w/shipping cover), inch	•	•	•	•
D22	12 cm ³ /rev charge pump, SAE B 13 tooth (w/shipping cover), metric	•	•	•	•
C25	12 cm ³ /rev charge pump, SAE B-B 15 tooth (w/shipping cover), inch			•	•
D25	12 cm ³ /rev charge pump, SAE B-B 15 tooth (w/shipping cover), metric			•	•
CNN	12 cm ³ /rev charge pump, none, SAE cover, inch	•	•	•	•
DNN	12 cm ³ /rev charge pump, none, SAE cover, metric	•	•	•	•
E16	No charge pump, SAE A 9 tooth (w/shipping cover), inch	•	•	•	•
F16	No charge pump, SAE A 9 tooth (w/shipping cover), metric	•	•	•	•
E19	No charge pump, SAE A 11 tooth (w/shipping cover), inch	•	•	•	•
F19	No charge pump, SAE A 11 tooth (w/shipping cover), metric	•	•	•	•
E22	No charge pump, SAE B 13 tooth (w/shipping cover), inch	•	•	•	•
F22	No charge pump, SAE B 13 tooth (w/shipping cover), metric	•	•	•	•
E25	No charge pump, SAE B-B 15 tooth (w/shipping cover), inch			•	•
F25	No charge pump, SAE B-B 15 tooth (w/shipping cover), metric			•	•
ENN	No charge pump, none, SAE cover, inch	•	•	•	•
FNN	No charge pump, none, SAE cover, metric	•	•	•	•

Align with option **B** (product version and unit)

"Inch": option B="AS", inch O-ring boss port.

"Metric": option B="AM", metric O-ring boss port.



Model code (E - M - N - Z - L)



E - displacement limiter

Code	Description	
N	No limiters	
В	Adjustable externally	
С	No limiters, required for FNR, NFPE, NFPH (align with option D: control)	
D	Adjustable externally, required for FNR, NFPE, NFPH (align with option D: control)	

Align with **Y**: settings if applicable

M - high pressure relief setting side "A" & N - high pressure relief setting side "B"

Code	Pressure setting
140	140 bar [2030 psi]
175	175 bar [2538 psi]
190	190 bar [2755 psi]
210	210 bar [3045 psi]
230	230 bar [3336 psi]
250	250 bar [3630 psi]
260	260 bar [3770 psi]
280	280 bar [4061 psi]
300	300 bar [4350 psi]
325	325 bar [4713 psi]
345	345 bar [5000 psi]

Please contact Danfoss Power Solutions for pressures not shown or for applied pressures above max. working pressure (see *MP1 operating parameters* on page 10).

Z - POR setting

Code	Description
NN	No pressure override

L - loop flushing

Code	Description	28	32	38	45
N	No loop flushing valve	Х	Х	Х	Х
В	Loop flushing; 1.6 mm orifice; 6 l/min	Х	Х	Х	Х

Align with **G**: system port type

62 | © Danfoss | February 2024



Model code (V - G - W)



V – charge pressure relief setting

Code	Description	
20	20 bar [290 psi]	Not to be used for NFPE or NFPH controls.
22	22 bar [319 psi]	NFPE is 24 bar or higher; NFPH is 26 bar or higher
24	24 bar [348 psi]	
26	26 bar [377 psi]	
28	28 bar [406 psi]	

G - system port type

Code	Description	28	32	38	45
A1	Inch O-ring boss per ISO 11926-1	Х	Х	Х	Х
A3	Inch O-ring boss per ISO 11926-1 with integral loop flush valve	Х	Х	Х	X
A4	Inch O-ring boss per ISO 11926-1 with speed sensor	Х	Х	Х	Х
A5	Inch O-ring boss per ISO 11926-1 with integral loop flush and speed sensor	Х	X	X	X
B1	Split flange per ISO 6162-2, (all other O-ring boss, inch per ISO 11926-1)			Х	Х
В3	Split flange per ISO 6162-2, (all other O-ring boss, inch per ISO 11926-1) with integral loop flush valve			Х	Х
B4	Split flange per ISO 6162-2, (all other O-ring boss, inch per ISO 11926-1) with speed sensor			Х	Х
B5	Split flange per ISO 6162-2, (all other O-ring boss, inch per ISO 11926-1) with speed sensor and loop flush			Х	Х
C1	Metric O-ring boss per ISO 6149-1	Х	Х	Х	Х
C3	Metric O-ring boss per ISO 6149-1 with integral loop flush valve	Х	Х	Х	Х
C4	Metric O-ring boss per ISO 6149-1 with speed sensor	Х	Х	Х	Х
C5	Metric O-ring boss per ISO 6149-1 with speed sensor and loop flush	Х	Х	Х	Х
D1	Split flange per ISO 6162-2, (all other O-ring boss, metric per ISO 6149-1)			Х	Х
D3	Split flange per ISO 6162-2, (all other O-ring boss, metric per ISO 6149-1) with integral loop flush valve			Х	Х
D4	Split flange per ISO 6162-2, (all other O-ring boss, metric per ISO 6149-1) with speed sensor			Х	Х
D5	Split flange per ISO 6162-2, (all other O-ring boss, metric per ISO 6149-1) with speed sensor and loop flush			Х	X

Align with **B**: product version and unit, and **L**: loop flushing

W - special hardware features

Code	Description	
RAC	randard valve plate, CW, 28 cm ³	
LAC	standard valve plate, CCW, 28 cm ³	
RAD	Standard valve plate, CW, 32 cm ³	
LAD	Standard valve plate, CCW, 32 cm ³	

© Danfoss | February 2024



W - special hardware features (continued)

Code	Description	
RAE	Standard valve plate, CW, 38 cm ³	
LAE	Standard valve plate, CCW, 38 cm ³	
RAF	Standard valve plate, CW, 45 cm ³	
LAF	Standard valve plate, CCW, 45 cm ³	
RBC	NFPE/NFPH/AC valve plate, CW, 28cm ³	
LBC	NFPE/NFPH/AC valve plate, CCW, 28cm ³	
RBD	NFPE/NFPH/AC valve plate, CW, 32cm ³	
LBD	NFPE/NFPH/AC valve plate, CCW, 32cm ³	
RBE	NFPE/NFPH/AC valve plate, CW, 38cm ³	
LBE	NFPE/NFPH/AC valve plate, CCW, 38cm ³	
RBF	NFPE/NFPH/AC valve plate, CW, 45cm ³	
LBF	NFPE/NFPH/AC valve plate, CCW, 45cm ³	

Align with **A**: displacement and rotation : and **D**: controls



Model code (X - Y)



X - paint and name tag

Code	Description	
NNN	Black paint, standard name tag	


Y - settings

Code	Description	
NNNN	None	
E095	Displacement limitation side A 95%, side B 95%	
E090	Displacement limitation side A 90%, side B 90%	
E085	Displacement limitation side A 85%, side B 85%	
E080	Displacement limitation side A 80%, side B 80%	
M00A	MDC control handle, standard orientation	
M095	Displacement limitation side A 95%, side B 95%, MDC handle, standard orientation	
M090	Displacement limitation side A 90%, side B 90%, MDC handle, standard orientation	
M085	Displacement limitation side A 85%, side B 85%, MDC handle, standard orientation	
M080	Displacement limitation side A 80%, side B 80%, MDC handle, standard orientation	
AF1F	Standard propel functionality	
AF2E	Standard propel functionality + ECO mode	
AF1E	Standard propel functionality + ECO mode + Kubota engine protocol	
AF2J	Standard propel functionality + ECO mode + cruise control + Kubota engine protocol	
AF3J	Standard propel functionality + ECO mode + cruise control	
AF4J	Standard propel functionality + ECO mode + cruise control	

© Danfoss | February 2024 BC178386485160en-000601 | 65



28/32 ports

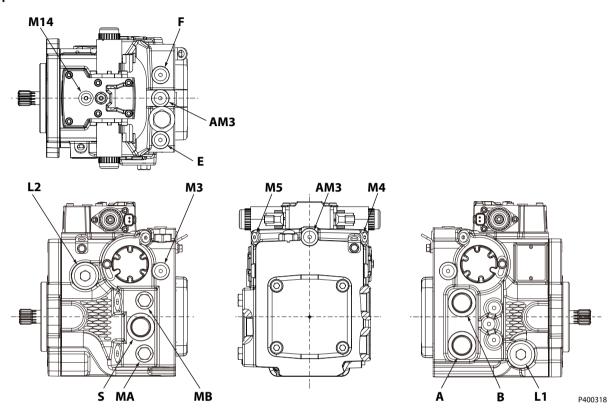


Port description

Port	Description	Code		Size
A/B	System	Inch	ISO 11926-1	1 1/16-12
		Metric	ISO 6149-1	M27x2
AM3	Alternative charge gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
E/F	Filtration inlet/outlet	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
L1/L2	Case drain	Inch	ISO 11926-1	1 1/16-12
		Metric	ISO 6149-1	M27x2
MA/MB	System gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
M3	Charge gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
M4/M5	Servo gauge	Inch	ISO 11926-1	7/16-20
		Metric	ISO 6149-1	M12x1.5
M14	Case gauge port	Inch	ISO 11926-1	7/16-20
		Metric	ISO 6149-1	M12x1.5
S	Charge pump inlet	Inch	ISO 11926-1	1 1/16-12
		Metric	ISO 6149-1	M27x2

66 | © Danfoss | February 2024 BC178386485160en-000601



38/45 ports

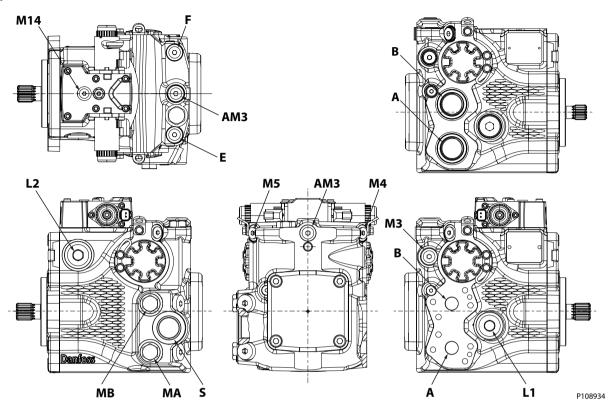


Port description


Port	Description	Code		Size
A/B	System	Inch	ISO 11926-1	1 5/16-12
		Metric	ISO 6149-1	M33x2
		Split flange port	ISO 6162-2	DN19 M10x1.5
AM3	Alternative charge gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
E/F	Filtration inlet/outlet	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
L1/L2	Case drain	Inch	ISO 11926-1	1 1/16-12
		Metric	ISO 6149-1	M27x2
MA/MB	System gauge	Inch	ISO 11926-1	3/4-16
		Metric	ISO 6149-1	M18x1.5
M3	Charge gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
M4/M5	Servo gauge	Inch	ISO 11926-1	9/16-18
		Metric	ISO 6149-1	M14x1.5
M14	Case gauge port	Inch	ISO 11926-1	7/16-20
		Metric	ISO 6149-1	M12x1.5
S	Charge Pump Inlet	Inch	ISO 11926-1	1 5/16-12
		Metric	ISO 6149-1	M33x2

© Danfoss | February 2024 BC178386485160en-000601 | 67




28/32 dimensions

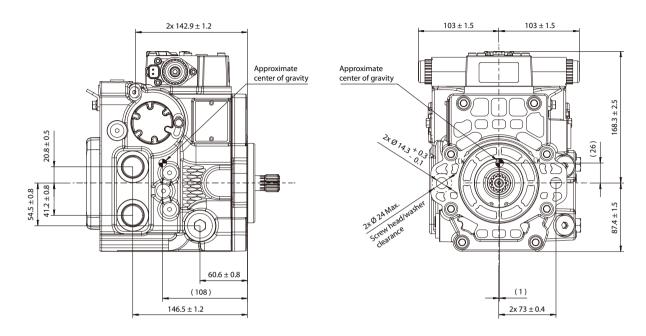


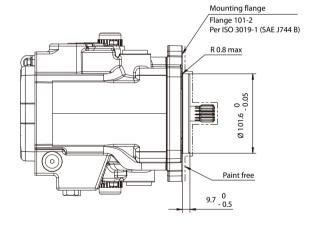


P400312



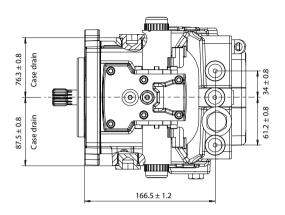

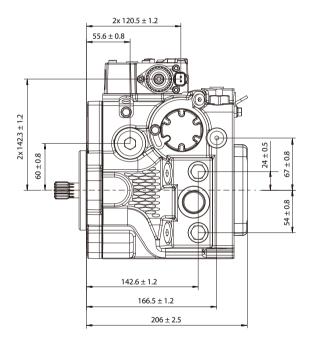

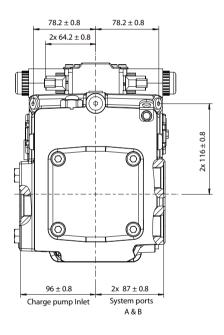


Please contact Danfoss representative for specific installation drawings.

© Danfoss | February 2024 BC178386485160en-000601 | 69



28/32 dimensions with speed sensor

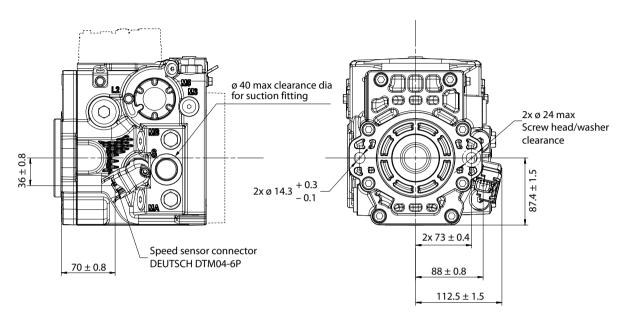

Please contact Danfoss representative for specific installation drawings.

Speed sensor connector




Pin	Assignment
1	Speed signal 1
2	NC
3	Speed signal 2
4	Supply
5	Ground
6	Temperature


70 | © Danfoss | February 2024




38/45 dimensions

Split flange type

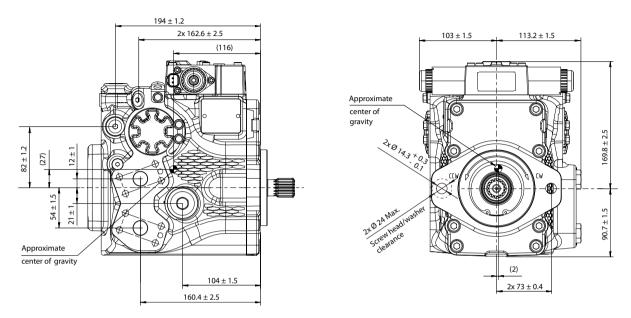


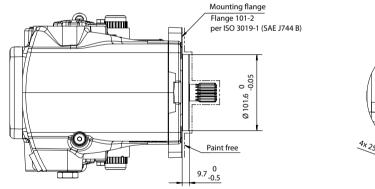


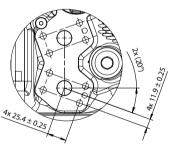


P108935



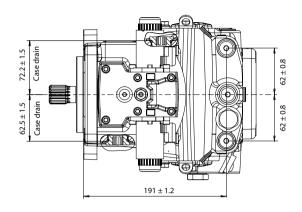

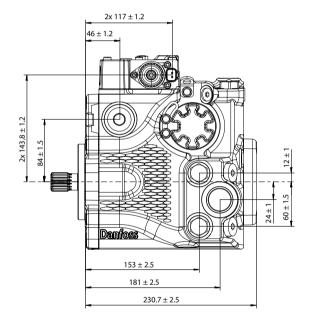


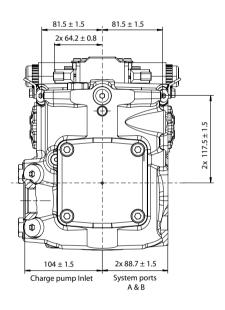

P108957




O-ring boss type

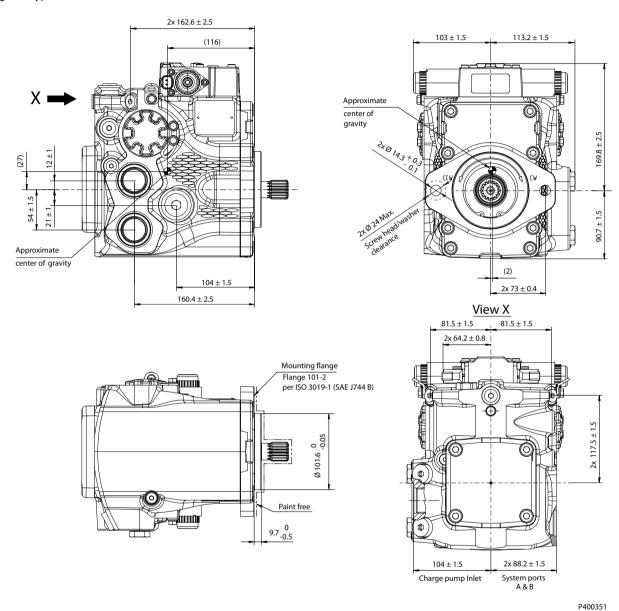

Please contact Danfoss representative for specific installation drawings.



38/45 dimensions with speed sensor

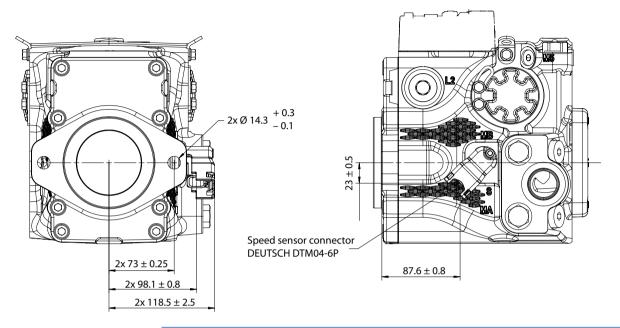

Please contact Danfoss representative for specific installation drawings.

Speed sensor connector




Pin	Assignment
1	Speed signal 1
2	NC
3	Speed signal 2
4	Supply
5	Ground
6	Temperature



Input shafts: option G4, F6 (SAE B, 13 teeth)

Option G4, F6, ISO 3019-1, Outer dia 22 mm

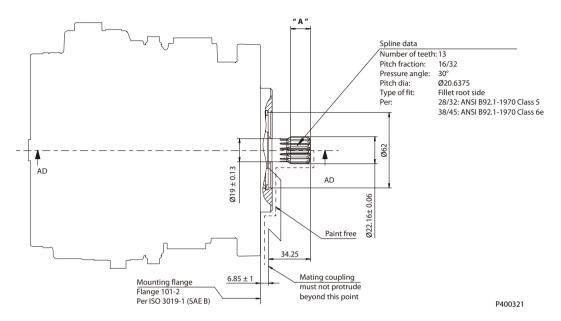

Min. active spline length ¹⁾	28/32	38/45
A	16.17 ± 0.5	16.17 ± 0.15

¹⁾ Minimum active spline length for the specified torque ratings.

Specifications


Option	G4, F6
Spline	13 teeth, 16/32 pitch
Maximum torque rating	226 N•m

Please contact Danfoss representative for specific installation drawings.



Input shafts: option G1, F1 (SAE B, 14 teeth)

Option G1, F1, ISO 3019-1, Outer dia 31.58 mm (38/45 only)

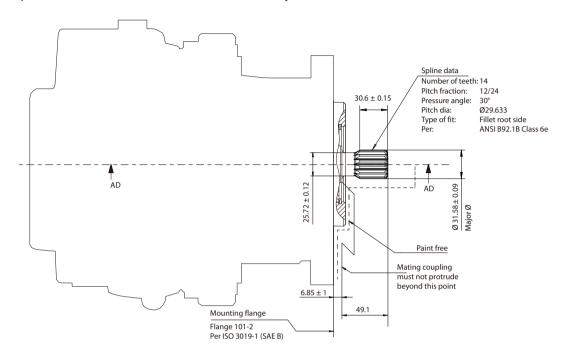

Specifications

Option	G1,F1
Spline	14 teeth, 12/24 pitch
Min. active spline length ¹⁾	30.6 ± 0.15
Maximum torque rating	592 N•m [437 lbf•ft]


¹⁾ Minimum active spline length for the specified torque ratings.

Please contact Danfoss representative for specific installation drawings.



Input shafts: option G5, F5 (SAE B, 15 teeth)

Option G5, F5, ISO 3019-1, outer dia 23 mm

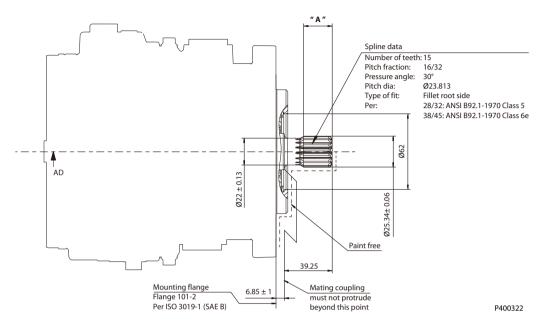

Min. act	tive spline length ¹⁾	28/32	38/45
Α		23.4 ± 0.5	22.0 ± 0.15

¹⁾ Minimum active spline length for the specified torque ratings.

Specifications


Option	G5, F5
Spline	15 teeth, 16/32 pitch
Maximum torque rating	362 N•m

Please contact Danfoss representative for specific installation drawings.



Input shafts: option A7, A9 (SAE B, straight key shaft)

Option A7, A9, ISO 3019-1, outer dia 22 mm (28/32 only)

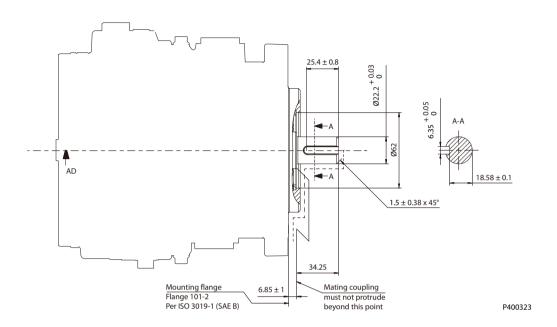

Specifications


Option	A7, A9
Maximum torque rating	226 N•m

Please contact Danfoss representative for specific installation drawings.



Input shafts: option G6, G7 (SAE B, 19 teeth)

Option G6, G7, ISO 3019-1, outer dia 31.24 mm (38/45 only)

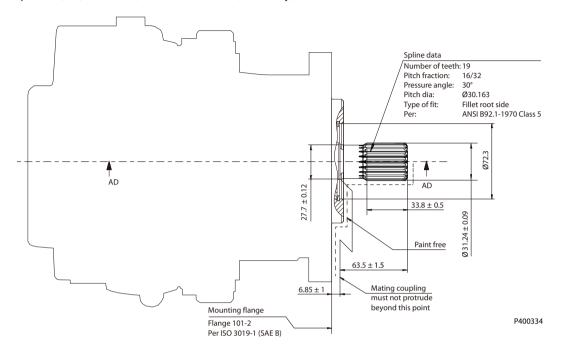

Specifications

Option	G6, G7
Spline	19 teeth, 16/32 pitch
Min. active spline length ¹⁾	33.8 ± 0.5
Maximum torque rating	734 N•m


¹⁾ Minimum active spline length for the specified torque ratings.

Please contact Danfoss representative for specific installation drawings.



Input shafts: option A6, A8 (SAE B, straight key shaft)

Option A8, A6, ISO 3019-1, outer dia 1 inch (38/45 only)

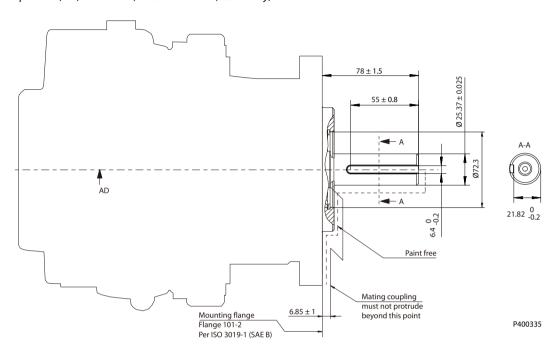

Specifications


Option	A6, A8
Maximum torque rating	362 N•m

Please contact Danfoss representative for specific installation drawings.



Input shafts: option F2, F3 (SAE B, taper key shaft)

Option F2, F3, ISO 3019-1, Code 25-3, Dia 22.2 Taper 1:8, without key, no through-hole in the end of the shaft (38/45 only)

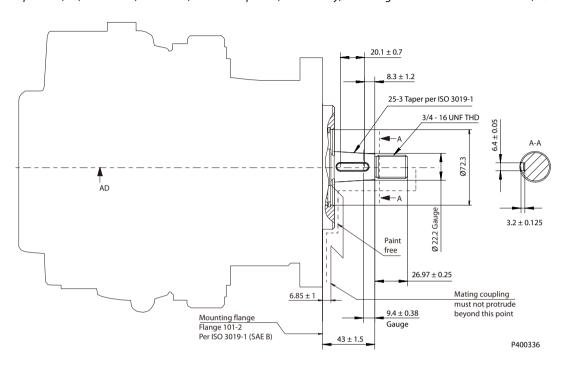

Specifications

Option	F2, F3
Maximum torque rating	497 N•m

Please contact Danfoss representative for specific installation drawings.

Tapered shaft customer acknowledgement

The Danfoss MP1 tapered shaft has been designed using the industry standard ISO 3019-1, minus the through-hole in the end of the shaft. Danfoss recommends a self-locking nut instead of a castle nut and pin. The nut and mating square-cut key are customer supplied.

The specified torque rating of the tapered shaft documented above is based on the cross-sectional diameter of the shaft, through the keyway, and assumes the proper clamp and fit between shaft and coupling. Danfoss guarantees the design and manufactured quality of the tapered shaft. The customer is responsible for the design and manufactured quality of the mating female coupling and key and applied torque on the nut. Danfoss has made provisions for the key in accordance to the ISO specification with the understanding that the key is solely to assist in the installation of the mating coupling.




Caution

Torque must be transmitted by the taper fit between the shaft and it's mating coupling, not the key. Torque or loading inadvertently transmitted by the customer supplied key may lead to premature shaft failure.



Auxiliary mounting: option A16, B16, C16, D16, E16, F16 (SAE A, 9 teeth)

Option A16, B16, C16, D16, E16, F16, ISO 3019-1, flange 82-2 (SAE A, 9 teeth)

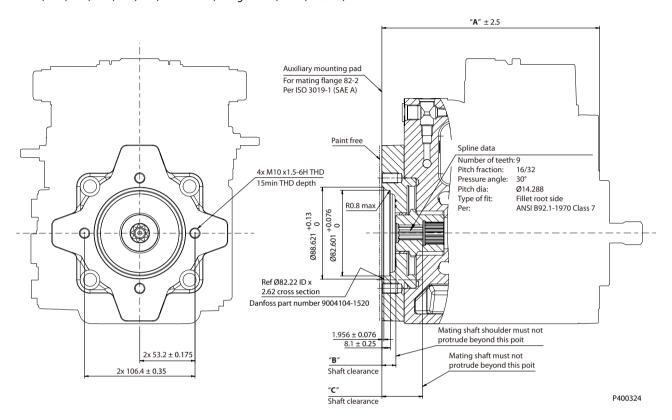

Location	28/32	38/45
A	210	234.5
В	11.8 min shaft clearance	12.0 min shaft clearance
С	38.3 min shaft clearance	50.0 min shaft clearance

Specifications


Option	A16, B16, C16, D16, E16, F16
Spline	9 teeth, 16/32 pitch
Maximum torque	107 N•m

82 | © Danfoss | February 2024 BC178386485160en-000601



Auxiliary mounting: option A19, B19, C19, D19, E19, F19 (SAE A, 11 teeth)

Option A19, B19, C19, D19, E19, F19, ISO 3019-1, flange 82-2 (SAE A, 11 teeth)

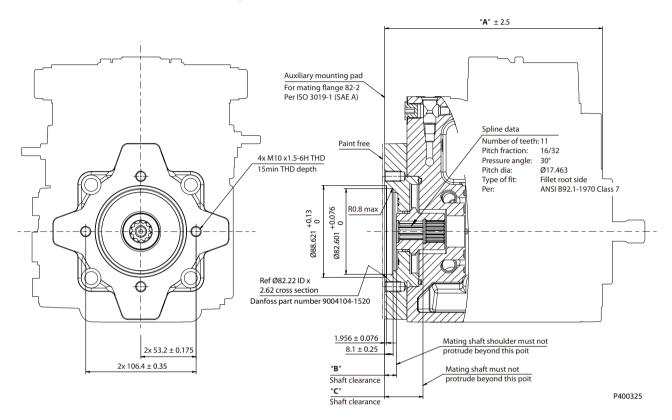

Location	28/32	38/45
Α	210	234.5
В	11.8 min shaft clearance	12.0 min shaft clearance
С	38.3 min shaft clearance	50.0 min shaft clearance


Specifications

Option A19, B19, C19, D19, E19, F19	
Spline 11 teeth, 16/32 pitch	
Maximum torque	147 N•m



Auxiliary mounting: option A22, B22, C22, D22, E22, F22 (SAE B, 13 teeth)

Option A22, B22, C22, D22, E22, F22, ISO 3019-1, flange 101-2 (SAE B, 13 teeth)

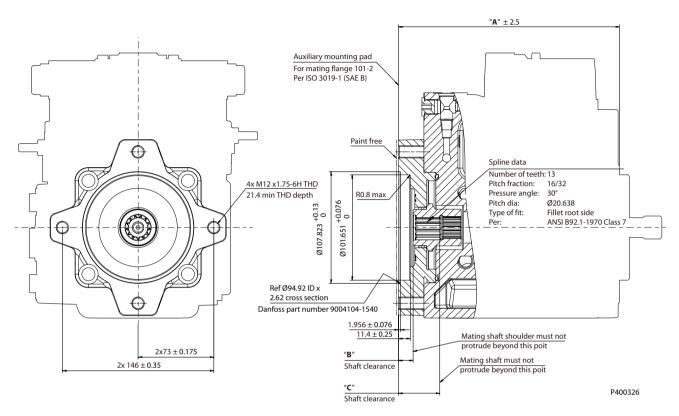

Location	28/32	38/45
A	213	234.5
В	14.8 min shaft clearance	12.0 min shaft clearance
С	41.3 min shaft clearance	50.0 min shaft clearance

Specifications


Option	A22, B22, C22, D22, E22, F22
Spline	13 teeth, 16/32 pitch
Maximum torque	248 N•m

Bolt length greater than 21.4 mm could result in a leak or damage the unit.



Auxiliary mounting: option A25, B25, C25, D25, E25, F25 (SAE B-B 15 teeth)

Option A25, B25, C25, D25, E25, F25, ISO 3019-1, flange 101-2 (SAE B-B, 15 teeth) (38/45 only)

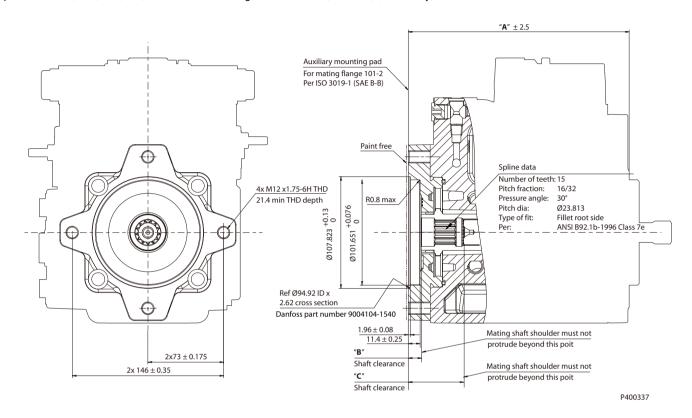

Location	38/45	
A	234.5	
В	12.0 min shaft clearance	
С	50.0 min shaft clearance	


Specifications

Option A25, B25, C25, D25, E25, F25	
Spline 15 teeth, 16/32 pitch	
Maximum torque	347 N•m

Bolt length greater than 21.4 mm could result in a leak or damage the unit.



Electric displacement control (EDC)

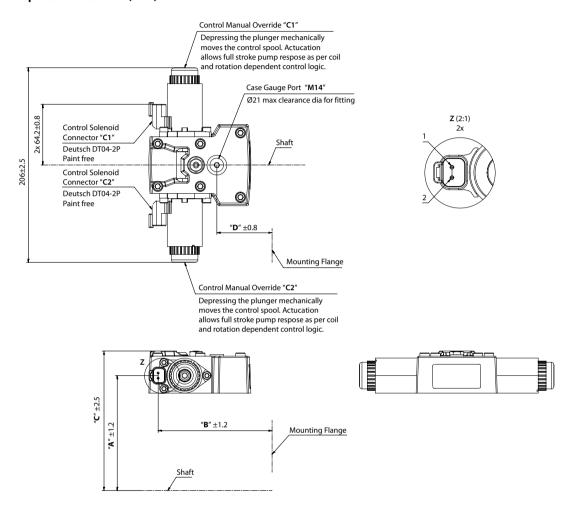

P400314


Control solenoid connector "C1" & "C2"				
Pin	Assignment	OR	Pin	Assignment
1	Supply		1	Ground
2	Ground		2	Supply

Location	28/32	38/45
Α	142.3	143.8
В	120.5	117
С	168.3	169.8
D	58.4	54.9

Please contact Danfoss representative for specific installation drawings.



Electric displacement control with CCO (EDC+CCO)

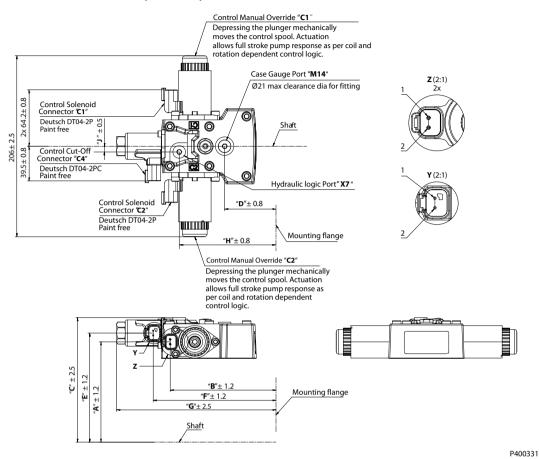


Control solenoid connector "C1" & "C2" & "C4"				
Pin	Assignment	OR	Pin	Assignment
1	Supply		1	Ground
2	Ground		2	Supply

Location	28/32	38/45
Α	142.3	143.8
В	120.5	117
С	169.6	171.4
D	58.4	54.9
Е	152.3	153.8
F	139.8	136.3
G	181.4	178
Н	110.2	106.7
J	6.5	

Please contact Danfoss representative for specific installation drawings.



EDC with ASNSR

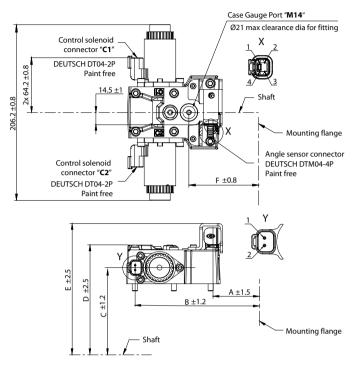

Control solenoid connector "C1" & "C2"				
Pin	Assignment	OR	Pin	Assignment
1	Supply		1	Ground
2	Ground		2	Supply

Angle sensor connector pinout

Pin	Assignment
1	Ground (GND)
2	Not connected
3	Output signal 1 (SIG 1)
4	Supply (V+)


Dimensions


Reference	28/32	38/45
A	32.7	29.2
В	120.5	117
С	142.3	143.8
D	169.6	171.4
Е	193.3	194.8
F	58.4	54.9

88 | © Danfoss | February 2024 BC178386485160en-000601



Hydraulic displacement control (HDC)

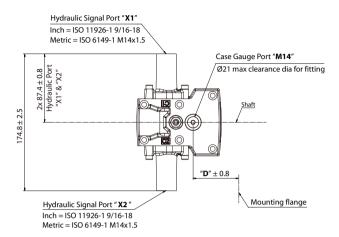

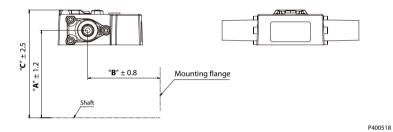



Legend


Dimension	28/32	38/45
Α	142.3	143.8
В	92.4	88.9
С	168.3	169.8
D	58.4	54.9



Manual displacement control (MDC)

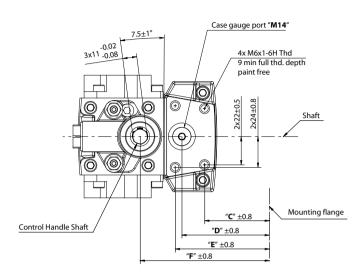

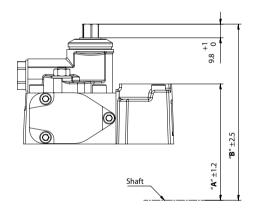

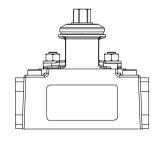


P400315

Location	28/32	38/45
А	166.8	168.3
В	209.7	211.2
С	31.9	28.4
D	49.7	46.2
Е	54.9	51.4
F	82.3	78.8

Please contact Danfoss representative for specific installation drawings.





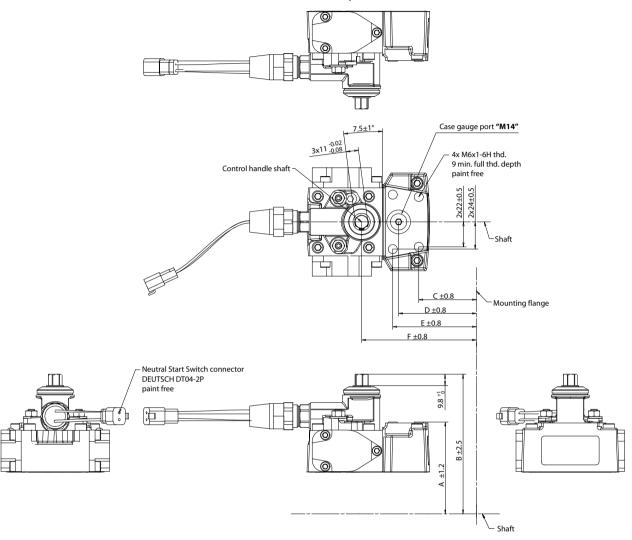

Neutral start switch connector


Pin	Assignment	Alternate	Pin	Assignment
1	Supply	OR	1	Ground
2	Ground		2	Supply

Dimension	28/32	38/45
Α	166.8	168.3
В	209.7	211.2
С	31.9	28.4
D	49.7	46.2
E	54.9	51.4
F	82.3	78.8

Please contact Danfoss representative for specific installation drawings.



MP1 MDC with CCO, options: M3, M4

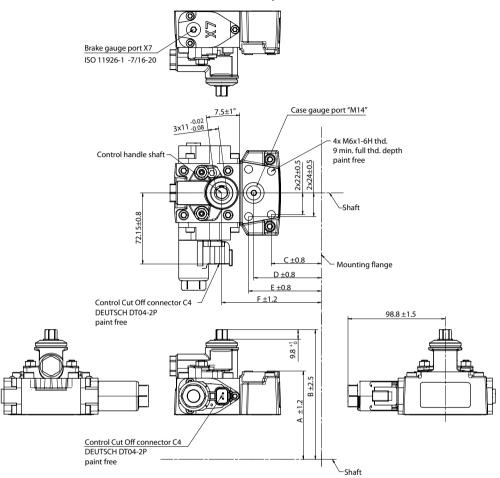

Control cut off connector (C4)


Pin	Assignment	Alternate	Pin	Assignment
1	Supply	OR	1	Ground
2	Ground		2	Supply

Dimension	28/32	38/45
Α	166.8	168.3
В	209.7	211.2
С	31.9	28.4
D	49.7	46.2
Е	54.9	51.4
F	82.3	78.8

Please contact Danfoss representative for specific installation drawings.



MP1 MDC with NSS and CCO options: M5, M6

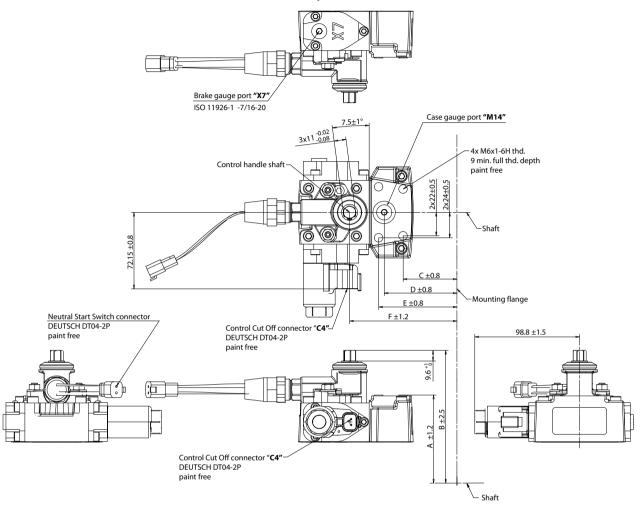

Neutral start switch, control cut off connectors


Pin	Assignment	Alternate	Pin	Assignment
1	Supply	OR	1	Ground
2	Ground		2	Supply

Dimension	28/32	38/45
Α	166.8	168.3
В	209.7	211.2
С	31.9	28.4
D	49.7	46.2
Е	54.9	51.4
F	82.3	78.8

Please contact Danfoss representative for specific installation drawings.



Forward-neutral-reverse (FNR)

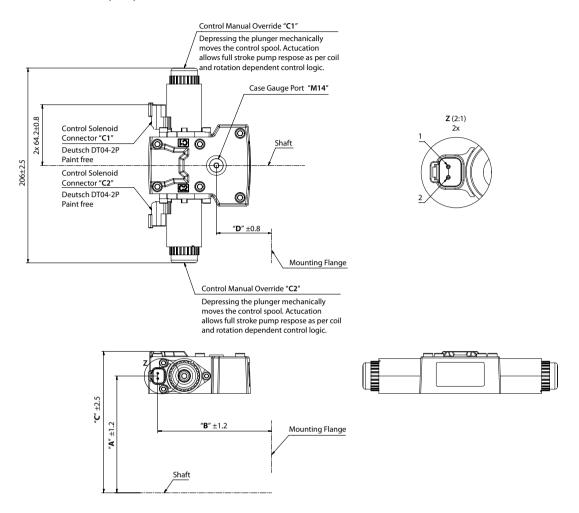

P400316


Control solenoid connector "C1" & "C2"				
Pin	Assignment	OR	Pin	Assignment
1	Supply		1	Ground
2	Ground		2	Supply

Dimension	28/32	38/45
А	142.3	143.8
В	120.5	117
С	168.3	169.8
D	58.4	54.9

Please contact Danfoss representative for specific installation drawings.



Non-feedback proportional electric (NFPE)

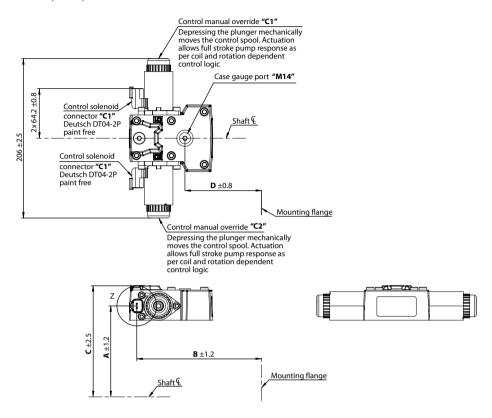


Control solenoid connector "C1" & "C2"				
Pin	Assignment	OR	Pin	Assignment
1	Supply		1	Ground
2	Ground		2	Supply

Dimension	28/32	38/45
Α	142.3	143.8
В	120.5	117
С	168.3	169.8
D	58.4	54.9

Please contact Danfoss representative for specific installation drawings.




MP1 Non-feedback proportional hydraulic (NFPH)

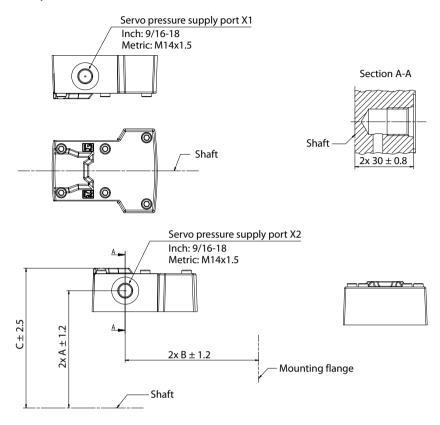

Dimension	28/32	38/45
A	145.3	146.8
В	96.4	92.9
С	168.3	169.8



Automotive control (AC)

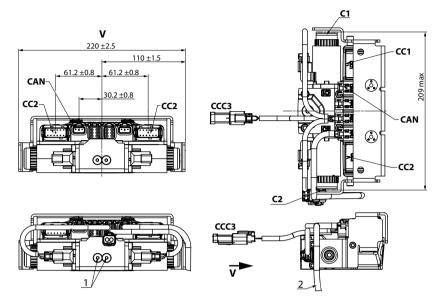

- 1 Plug removing can cause contamination issues
- 2 PPU wire harness is factory installed to speed sensor


Connectors description

Port	Description
C1 and C2	 Control manual override C1 Control Manual Override C2
CC1	Port A control connector DEUTSCH DTM04-12P; paint free
CC2	Port B control connector DEUTSCH DTM04-12P; paint free
CC3	Control connector DEUTSCH DT06-2S; paint free; For using connector, the plug may be removed.
CAN	Control connector DEUTSCH DTM04-3P; paint free; For using connector, the plug may be removed.

Please contact Danfoss representative for specific installation drawings.



AC connectors dimensions

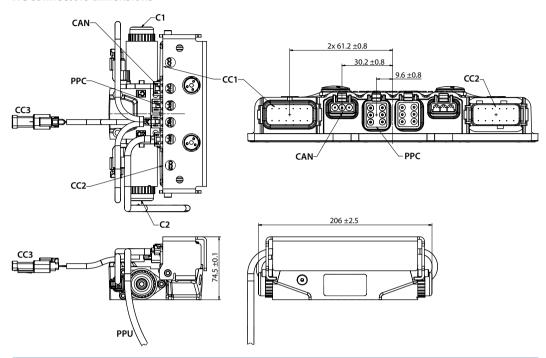

PPU wire harness is factory installed to speed sensor.

CC3

Connector DEUTSCH, 2-pin



- 1. Digital output A1 (+)
- 2. Digital output A2 (-)

CAN

Connector DEUTSCH, 3-pin



- 1. CAN High
- 2. CAN Low
- 3. CAN Shield


PPC

Connector DEUTSCH, 6-pin



- **1.** Sensor A (+)
- 2. Analog input A
- **3.** Sensor A (-)
- **4.** Sensor B (-)
- 5. Analog input B
- **6.** Sensor B (+)

Connector DEUTSCH, 12-pin

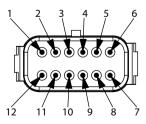

CC1

- **1.** Battery (-)
- 2. Battery (+)
 3. Sensor (+)
- **4.** Sensor (-)
- **5.** Motor rpm input (frequency)
- 6. Forward input (digital)
- 7. Reverse input (digital)
- **8.** Sensor (+)
- **9.** Sensor (-)
- **10.** Drive pedal input (analog nominal)
- **11.** Drive pedal input (analog red)
- **12.** Neural input (digital)

CC2


- 1. Inch input (analog red)
- 2. Mode switch B input (digital nominal)
- 3. Motor prop/PCOR driver
- 4. Motor direction input (analog)
- **5.** Sensor (+)
- 6. Sensor (-)
- 7. Inch input (analog nominal)
- 8. Motor BPD driver
- 9. Digital output B2 (-)
- **10.** Digital output B1 (+)
- 11. Mode switch A input (digital)
- **12.** Mode switch B input (digital red)



Filtration


Suction filtration: option S

28/32

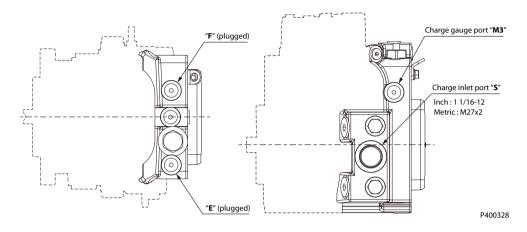

Please contact Danfoss representative for specific installation drawings.

38/45

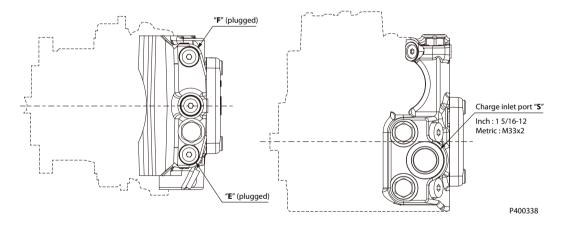


Please contact Danfoss representative for specific installation drawings.



Filtration


Remote full flow charge pressure filtration: option R

28/32

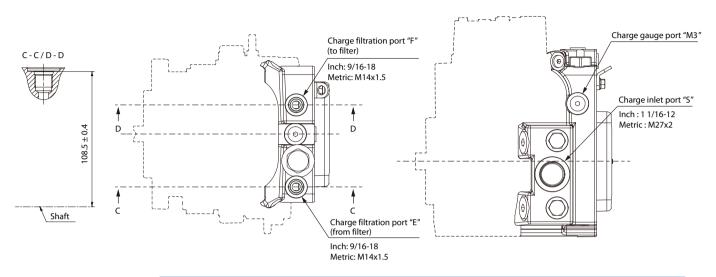

Please contact Danfoss representative for specific installation drawings.

38/45

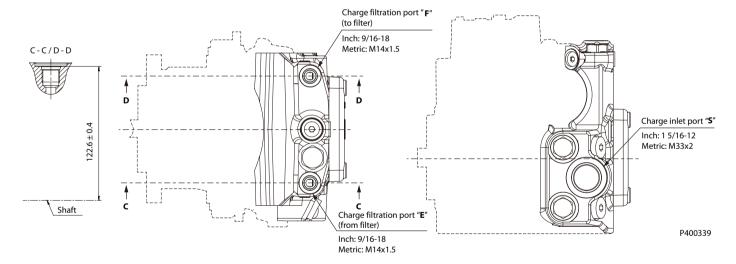


Please contact Danfoss representative for specific installation drawings.



Filtration


External full flow charge pressure filtration: option E

28/32

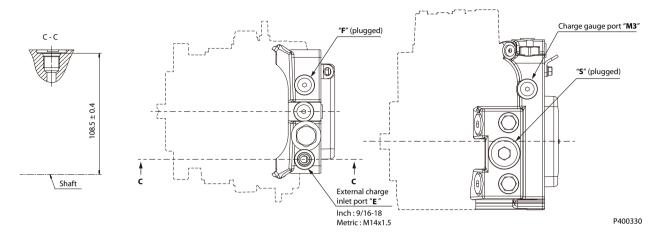

Please contact Danfoss representative for specific installation drawings.

38/45

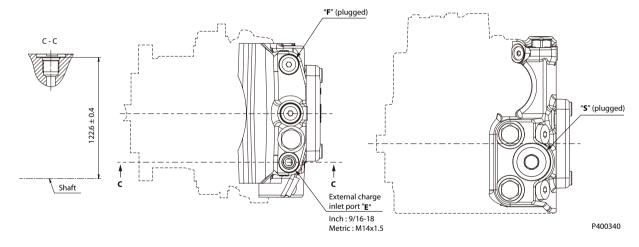

Please contact Danfoss representative for specific installation drawings.



Products we offer:

- Cartridge valves
- DCV directional control valves
- · Electric converters
- Electric machines
- Electric motors
- Gear motors
- Gear pumps
- Hydraulic integrated circuits (HICs)
- · Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1* joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1* software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

Hydro-Gear www.hydro-gear.com

Daikin-Sauer-Danfoss www.daikin-sauer-danfoss.com **Danfoss Power Solutions** is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

Go to www.danfoss.com for further product information.

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

Local address:

Danfoss Power Solutions (US) Company 2800 East 13th Street Ames, IA 50010, USA Phone: +1 515 239 6000 Danfoss Power Solutions GmbH & Co. OHG Krokamp 35 D-24539 Neumünster, Germany

Phone: +49 4321 871 0

Danfoss Power Solutions ApS Nordborgvej 81 DK-6430 Nordborg, Denmark Phone: +45 7488 2222 Danfoss Power Solutions Trading (Shanghai) Co., Ltd. Building #22, No. 1000 Jin Hai Rd Jin Qiao, Pudong New District Shanghai, China 201206 Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.